

C L E A N F I R E S Y S T E M

XARALYN®

EN

Controls/maintenance

Fogo Forest 152/165



Read and understand this entire owner's manual, including all safety information, before plugging in or using this product. Failure to do so could result in fire, electric shock, or serious personal injury.



Keep this owner's manual for future reference. If you sell or give this product away, make sure this manual accompanies this product.

Three-sided electric fire



LIGHTS



REMOTE



HEATING

Version: 2024-01


EN Power ⚠

Plug the power cord into a 220-240 Volt 15 Amp grounded outlet (see **IMPORTANT SAFETY INFORMATION in built-in manual**. Make sure the outlet is in good condition and that the plug is not loose. **NEVER** exceed the maximum amperage for the circuit. **DO NOT** plug other appliances into the same circuit.

Methods of Operation

This electric fireplace can be operated by the **TOUCH PANEL**, located on the upper right side of the fireplace (see below picture), or by the battery-powered **REMOTECONTROL**.


Before operating, please review the **IMPORTANT SAFETY INFORMATION in built in manual**, and heed all warnings.

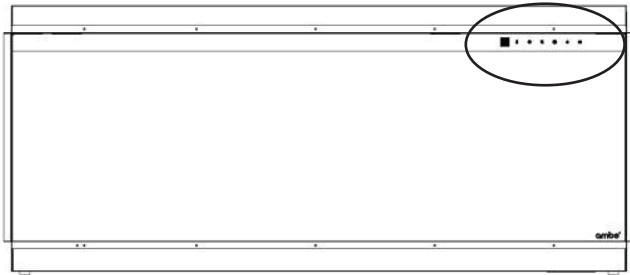

Touch Panel Operation



 
Touch On Control Panel Operation

BUTTON	FUNCTION	ACTION & INDICATION
 POWER	Power on/off/remote control pairing button: short press to turn on and off; long press to pair the remote control.	1. Press once. Indicator light turns on. Power turns on. All functions enabled. 2. Press again. Flame effect turns off. Unit goes to standby. All functions turn off.
 TEMP	Temperature setting/ Temperature unit switch key	1. Short press is the temperature setting key Long press to switch between Fahrenheit and Celsius.
 HEATER	HEATER button: Turns heater on and off. NOTE: The heater only works when the flame effect is on. If the flame effect is off, the heater will not turn on. NOTE: To prevent overheating, the heater blows cool air for 10 seconds before the heater turns on, and after it turns off.	Heating switch key H0 (Heating off) H1 Slow Heating H2 Rapid Heating Repeat cycle adjustment. The fan blows cool air, then turns off.
 TIMER	TIMER button: Controls timer settings to turn off fireplace at selected time. Settings range from 0.5 hours to 8 hours. 00(Timing off)-05ꠔTimed half an hourꠔ1HꠔTimed 1 hour)-8H (8 hours)	1. Press once. Indicator light turns on. Timer is set to 0.5 hours. 2. Press again until desired setting is reached. Indicator lights show setting. Repeat cycle adjustment.
 FLAME COLOR	FLAME COLOR button: Makes the color flame effect changing. NOTE: color effect stays on until power button is turned off. Color flame effect must be on for heater to turn on. NOTE: this fireplace is with memory function for flame.	1. Press once. Flame color effect gets changing. 2. Press again until desired setting is reached. In total 12 colors for flame. 12 kinds of flame color cycle adjustment 01-12.
 FLAME BRIGHTNESS	FLAME button: Makes flame effect dimmer and brighter. NOTE: Flame effect stays on until power button is turned off. Flame effect must be on for heater to turn on.	1. Press once. Flame brightness effect gets changing. 2. Press again. Flame brightness adjustment key: F1-F2-F3-F4-F5-F4-F3-F2-F1 repeat cycle adjustment.
 DISPLAY	2-digit digital tube function display.	

Remote control



Notice: Poke the hole of the back panel with a pin and the remote control is to be open, then you can put in or replace the battery.

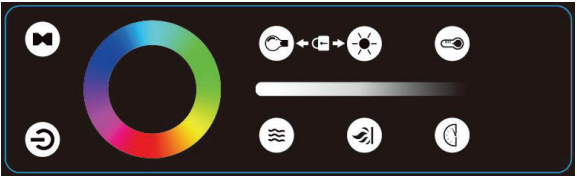

Touch On Control Panel Operation

BUTTON	FUNCTION	ACTION & INDICATION
 POWER	ON: Enables control panel functions and remote control. Turns on flame effect. OFF: Disables control panel functions and remote control. Turns off flame effect.	1. Press once. Indicator light turns on. Power turns on. All functions enabled. 2. Press again. Flame effect turns off. Unit goes to standby. All functions turn off.
 HEATER	Heating switch: slow-fast-off-cycle HEATER button: Turns heater on and off. NOTE: The heater only works when the flame effect is on. If the flame effect is off, the heater will not turn on. NOTE: To prevent overheating, the heater blows cool air for 10 seconds before the heater turns on, and 30 seconds turns off.	1. Press once. Indicator lights up. Fan blows cool air for 10 seconds. Low heater turns on and blows warm air. 2. Press again. Indicator lights up. High heater turns on and blows hot air. 3. Press again. Heaters turn off. The fan blows cool air, then turns off.
 FLAME COLOR	Flame color button: Flame color adjustment: 12 color cycles NOTE: color effect stays on until power button is turned off. Color flame effect must be on for heater to turn on.	1. Press once. Flame color effect gets changing. 2. Press again until desired setting is reached. In total 12 colors for flame. NOTE: this fireplace is with memory function for flame.
 SPEED	Flame speed button: Controls the speed of the flame. There are 3 flame speed settings: 01(slowest), 02 (Medium), 03 (fastest).	1. Press once. Flame speed gets changing. 2. Press again until desired setting is reached. Display shows the setting. The Default setting is 02 (medium speed)
 TIMER	Timing switch: 00 means timing off 05 meanstiming half an hour 1-8H means timing 1-8 hours regular time	1. Press once. Indicator light turns on. Timer is set to 0.5 hours. 2. Press again until desired setting is reached. Indicator lights show setting.
 FLAME BRIGHTNESS	Flame brightness adjustment FLAME button: Makes flame effect dimmer and brighter. NOTE: Flame effect stays on until power button is turned off. Flame effect must be on for heater to turn on.	1. Press once. Flame brightnesseffect gets changing. 2. Press again. until desired setting is reached. 3. Slide bar adjustment: Slide up and down
 LED BRIGHTNESS	Charcoal LED brightness adjustment: Makes the LED ember lights on bottom effect gets changing. NOTE: LED Ember light brightness effect stays on until power button is turned off.	1. Press once. LED ember light color effect gets changing. Press again until desired setting is reached. 2. Slide bar adjustment: Slide up and down <i>Press at the same time as these two button, the remote control button lock and unlock cycle switch.</i>  
	Slide bar adjustment: Slide up and down 1,This button can be adjusted when the Flame or Top or Ember Color light button is pressed to activate. 2,When the Flame or Top or Ember Color light button is not selected, slide the slider up and down to adjust the brightness of all lights. 3,When the flame sound is selected, slide the slider up and down to adjust the flame sound.	
 TEMP	Temperature setting: switch between 20-32 degrees Celsius, long press to switch between Celsius and Fahrenheit 1. Press once: Touch panel indicator becomes active. Press again until desired setting is reached. Digital display shows setting circles as 2. Slide bar adjustment: Slide up and down NOTE: Press the button for 5 seconds to switch between °C and °F	
 LED AMBER	LED Ember light button: Makes the color on bottom effect gets changing. NOTE: Ember color effect stays on until power button is turned off. NOTE: this fireplace is with memory function for LED ember lights. 1. Press once. LED ember light color effect gets changing through sliding circular color ,until desired setting is reached. In total 256 colors for flame. NOTE: It will take 1 second to switch between colors.)	

Other instructions

1. Remote control pairing

There are 2 ways to pair the remote control:
Method 1: Power-on pairing, when the host is powered off, power on again. After power-on, keep pressing any button on the remote control until you hear a long beep from the buzzer in the host, which means the pairing is successful , Poweron pairing must be completed within 3 seconds after power-on again, and the host exits the remote control pairing mode after 3 seconds.

Method 2: Long press the “Power on/Off/Remote control pairing button” on the panel of the host, after hearing a long beep from the buzzer in the host, keep pressing any button on the remote until you hear the buzzer in the host again a long beep on the device means that the pairing is successful. Pairing must be completed within 5 seconds, otherwise the pairing mode will exit.

2. Heating method

The host has 2 heating methods:
Method 1: Slow heating H1
Method 2: The heating mode can only be turned on after the heating function is turned on.When the heating mode is turned on, it will be adjusted according to the set temperature value to make the indoor temperature constant (When the indoor temperature is lower than the set temperature by 0.5°C and above, heating starts, and when the temperature is higher than the set temperature by 0.5°C and above, heating stops).

3. Turn on regularly

When the host is turned on through the “timing switch key” on the host panel, the host will shut down after the timer countdown is completed.

4. Temperature setting

When adjusting the temperature through the host operation panel, when the temperature unit is Celsius (°C), short press the “temperature setting/temperature unit switch key”, the temperature will be 20°C-21°C-22°C-23°C-24°C-25 °C-26°C-27°C-28°C- 29°C- 30°C-31°C-32°C-C (degrees Celsius symbol) to switch cyclically.
When the temperature unit is Fahrenheit (°F), short press the “temperature setting/temperature unit switch key”, the temperature will be 68°F-70°F-72°F-73°F-75°F-77°F-79°F-81°F- 82°F-84°F -86°F-88°F-90°F-F (degrees Fahrenheit symbol) to switch cyclically.

5. Operation panel wake up

After the device is turned on for more than 15 seconds without any operation, the icon light on the control panel of the host is off, and only the “switch/remote control pairing button” icon light is on. At this time, you can touch any button to wake up. After waking up, all the icon lights are on bright. If you do not proceed to the next step at this time. The 2-digit digital tube will indicate the working status of the equipment.
The working status indication of the equipment is divided into 2 cases, the first case (Timed on) For the first time after waking up, display the function code representing the current key of the host, after 3 seconds, switch for the second time, display the remaining time interval value representing the current timing of the host (Unit hour), after 3 seconds, switch for the third time, the display represents the current temperature setting value of the host, after 3 seconds, switch the 4th time, the display represents the current heating mode (H0/H1/H2) of the host.(H0/H1/H2).

Case 2:
Timing off, the first time after waking up, the function code representing the current key of the host is displayed, after 3 seconds, switch for the second time, display the current temperature setting value of the representative host, after 3 seconds, switch for the third time, the display represents the current heating mode of the host (H0/H1/H2).

6. Memory function

When the host is turned off in a “non-power-off” mode, it has the function of remembering the last working state. When it is turned on again, it will continue to work in the last working state. (Except for the timing opening function through the host operation panel).

Temperature Limiting Control

This heater is equipped with a Temperature Limiting Control. Should the heater reach an unsafe temperature, the heater will automatically turn OFF. To reset:

1. Unplug the power cord from the outlet.
2. Turn the ON/OFF switch on the CONTROL PANEL to OFF. Wait 5 minutes.
3. Inspect the fireplace to make sure no vents are blocked or clogged with dust or lint. If they are, use a vacuum to clean the vent areas.
4. With the POWER switch in the OFF position, plug the power cord back into the outlet.
5. 5. If the problem continues, have your outlet and wiring inspected by a professional.

Remote Control Battery Information

Remote control uses CR2025 batteries (included).
NOTE: Remote control battery used depends on the remote-control type which selected above.

- 
 - **When the heater is first turned on**, a slight odor may be present. This is normal and should not occur again unless the heater is not used for a long period of time.
 - To improve operation, aim the remote control at the front of the fireplace. **DO NOT** press the buttons too quickly. Give the unit time to respond to each command.
 - **NEVER** dispose of batteries in fire. Failure to observe this precaution may result in an explosion. Dispose of batteries at your local hazardous material processing center.

Care and maintenance

ALWAYS turn the heater **OFF** and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in electric shock, fire, or personal injury.

NEVER immerse in water or spray with water. Doing so could result in electric shock, fire, or personal injury.

Metal:

- Buff using a soft cloth, slightly dampened with a citrus oil-based product.
- **DO NOT** use brass polish or household cleaners as these products will damage
- the metal trim.

Glass:

- Use a good quality glass cleaner sprayed onto the cloth or towel. Dry thoroughly with a paper towel or lint-free cloth.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Vents:

- Use a vacuum or duster to remove dust and dirt from the heater and vent areas.

Plastic:

- Wipe gently with a slightly damp cloth and a mild solution of dish soap and warm water.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Electrical and Moving Parts:

- The fan motors are lubricated at the factory and will not require lubrication.
- Electrical components are integrated in the fireplace and are not serviceable by the consumer.



Risk of electric shock! DO NOT OPEN any panels!
No user- serviceable parts inside!



ALWAYS turn the heater OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in electric shock, fire, or personal injury.



WARNING! NO SERVICING of the internal or electrical parts should be performed by the consumer.
Do not service the unit yourself.

Storage:

- Store heater in a clean dry place when not in use.

CAUTION: To remove the glass, you will notice two screws on front both sides (right and left) of the fireplace. Once the screws are removed, slide the glass up and away from the fireplace. Once the bottom frame plate is removed, you will notice one flame motor on right side where the rod should be in place with the rubber plugs.
Please remember to always have the unit disconnected prior to any work, always lay glass as well
as the unit on a towel or other material not to damage parts/frame.

This entire process should not take longer than 20-30minutes.

Troubleshooting

DISCONNECTED THE APPLIANCE COMPLETELYAND LET COOL PRIOR TO ANY SERVICE. ONLY A QUALIFIED SERVICE PERSON SHOULD SERVICE AND REPAIR THIS ELECTRIC APPLIANCE.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Fireplace turns off and will not turn on.	Fireplace has over-heated and safety device has caused thermal switch to disconnect or home circuit breaker has opened.	Reset switch by turning main power switch off and waiting 10 minutes then turning it back on or reset circuit breaker.
Flame is not moving	1. Loose wiring. 2. Flame motor defective. 3. Flame rod out of place	1. Inspect wiring for loose connections. 2. Call a qualified service technician to replace flame motor. 3.“Flame Rod” out of place due to rough transit/handling of the product. This issue can be corrected as simple as removing the glass, flipping the fireplace upside down, removing a set of screws that are holding the bottom frame plate and place the flame rod back.
Flame is not visible.	Wiring is loose.	Disconnect from power source and inspect wiring for loose connections and repair or replace if necessary.
Log set and/or ember is not glowing.	1. Wiring is loose. 2.Ember is in off mode	1.Disconnect from power source and inspect wiring for loose connections and repair or replace if necessary 2.Ensure the ember button is pressed until on high.
Remote control does not work	1. Low batteries. 2. Not aiming control correctly 3. Defective remote control and/or sensor	1. Replace batteries in remote control. 2. Aim control at sensor located directly behind glass screen in center of unit just above logs. 3. Replace remote control and/or sensor

C L E A N F I R E S Y S T E M
XARALYN®

T. (+31) (0)226 - 33 14 20 | info@xaralyn.com | www.xaralyn.com

C L E A N F I R E S Y S T E M

XARALYN®

EN NL FR DE

Built-in instructions

Fogo Forest 152/165



Read and understand this entire owner's manual, including all safety information, before plugging in or using this product. Failure to do so could result in fire, electric shock, or serious personal injury.



Keep this owner's manual for future reference. If you sell or give this product away, make sure this manual accompanies this product.

Three-sided electric fire



LIGHTS



REMOTE



HEATING

Version: 2024-01

EN Important safety information ⚠

When using electrical appliances basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burning, do not touch hot surface. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 1 m from the front of the heater and keep them away from the sides and rear. In order to avoid overheating, do not cover the heater.
- Extreme caution is necessary when any heater is used near children or the infirm and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped damaged in any manner, return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Indoor use only, do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations.
- Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tipped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings many become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, or flammable liquids are used or stored.
- Use this heater only as describes in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- **DANGER-HIGH** Temperatures may be generated under certain abnormal conditions. Do not partially or fully cover or obstruct the front of this heater.
- Replacement of the lamps should be done only while the heater is disconnected from the supply circuit.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

 
 
 
Preparation ⚠

This product includes a GLASS panel! Always use extreme caution when handling glass. Failure to do so could result in personal injury or property damage.

Remove all parts and hardware from the carton and place them on a clean, soft, dry surface. Parts and assembly steps are grouped for free-standing or wall-hanging use. Check the parts list to make sure nothing is missing. Dispose of packaging materials properly. Please recycle whenever possible.



You will need the following tools (not included): Phillips screwdriver; stud finder; level; tape measure; electric drill; 1/4" wood drill bit,hammer.

Parts and hardware


 A -F ireplace	 B -W oodS crews	 C -D rywall Anchors
	 D -D ecorativeL ogs	 E -D ecorativeP ebbles
 F -D ecorativeC rystals (Big &S mall)	 G - RemoteC ontrol	 H - MetalB rackets

Installation for 3 Sided Viewing


1. The fireplace is fixed with fending bars and panels on the left and right side.

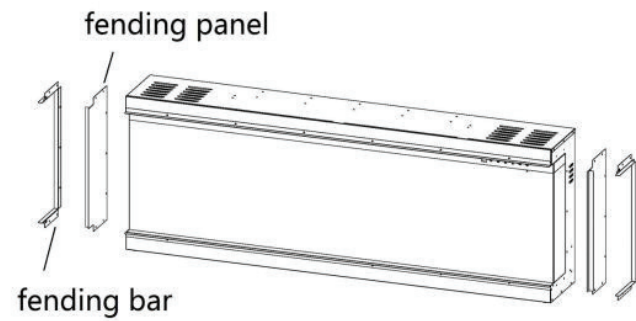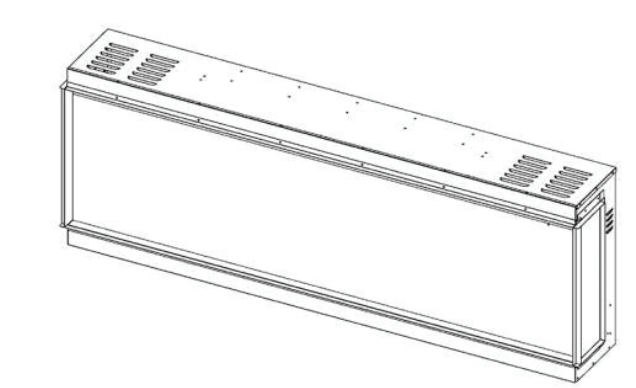


2. Take off the fending bars and panels if you want to view the fire from three sides.

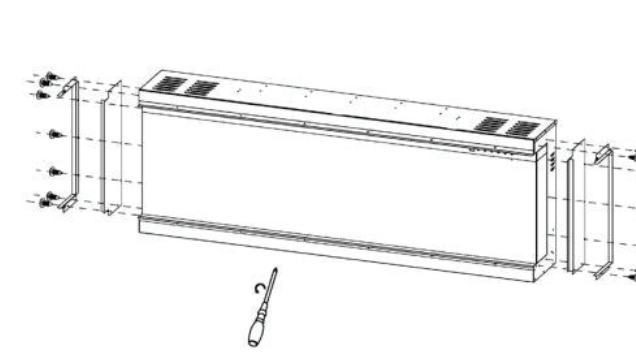


3. Fix back the fending bars after the panels are removed.

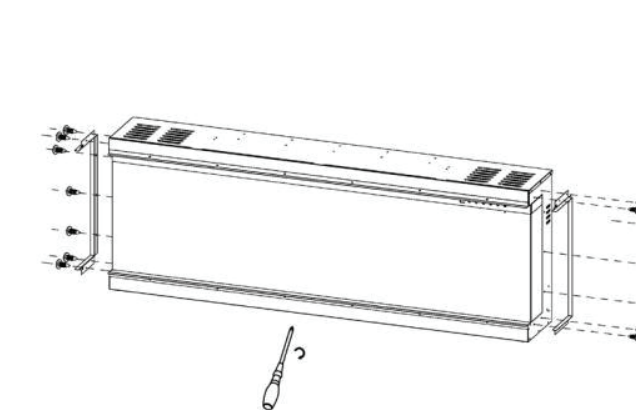


4. Remove the screws from the fireplace as shown in the picture below.

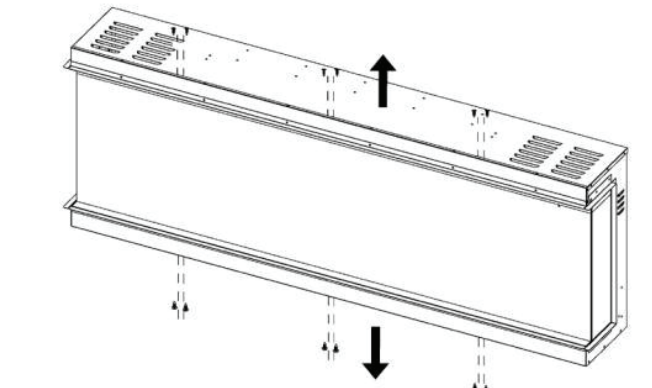


5. Fix the brackets with the screws in the previous step.

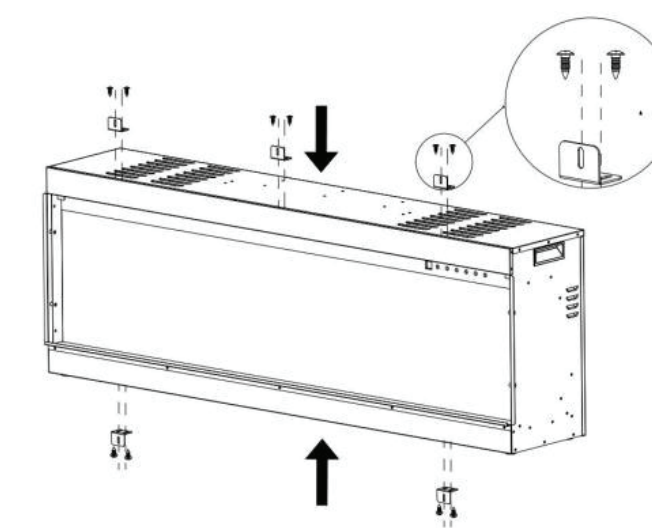


6. Make an opening for the fireplace.

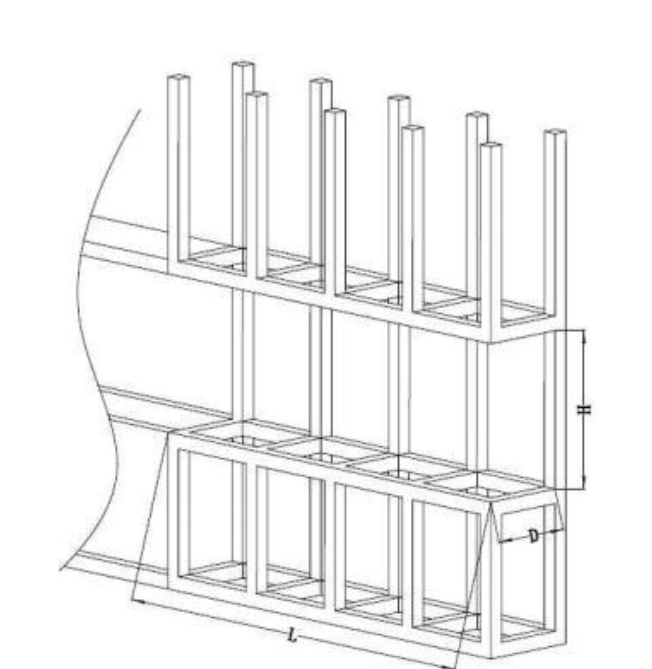


7. Insert the fireplace into the wall opening. Drive the mounting screws into the brackets and the wall studs. Plug in and check if the fireplace works properly. If so, move on to next step.

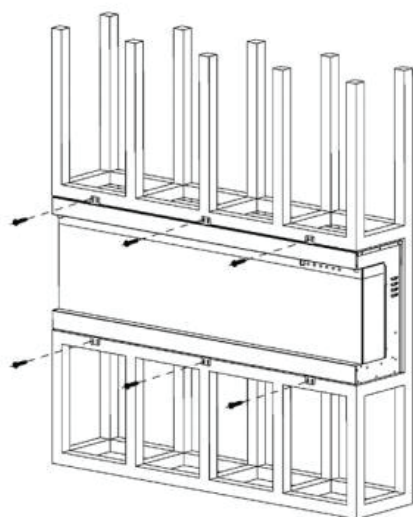

8. Cover the glass panel with protective plastic bag and install plywood or drywall.

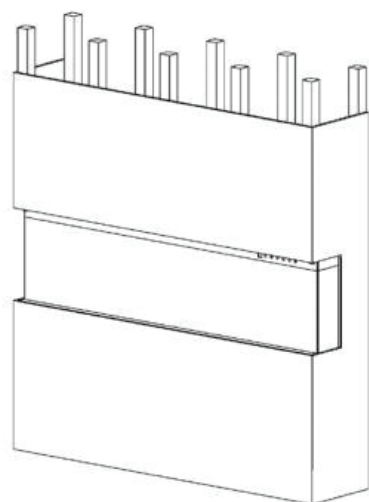


9. Decorate the plywood or drywall with glazed tile, wallpaper, etc.

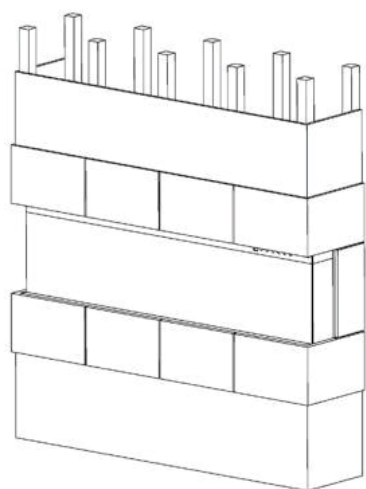


Installation for Front and Left/right Side Viewing


1. To view the fireplace from front and left/right side, you need to take off the fending panel on the chosen side and keep the other side close to a wall.

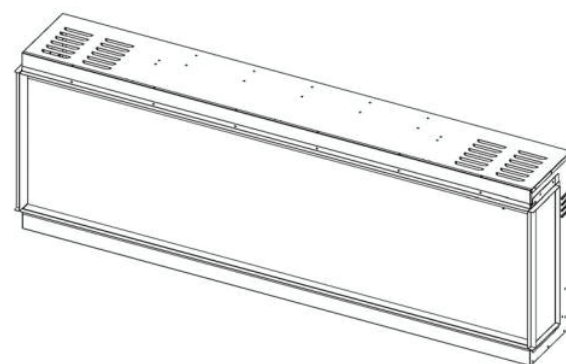


2. Remove the 7 screws on the chosen side. Take off the fending bar and panel.

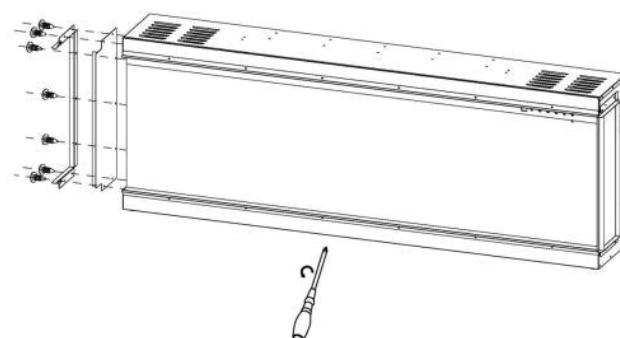


3. Fix back the fending bar after the panel is removed.

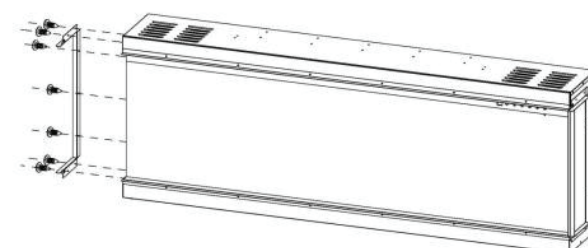


4. Remove the screws from the fireplace as shown in the picture below.

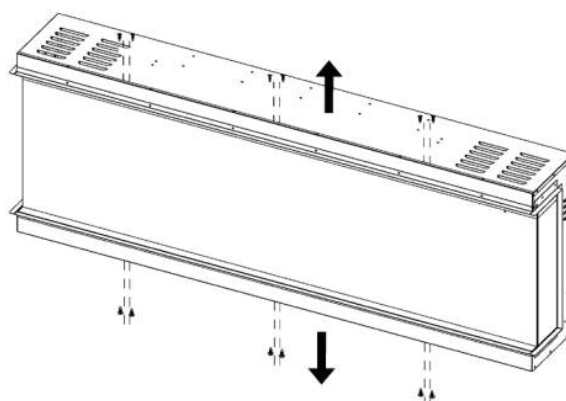


5. Fix the brackets with the screws in the previous step.

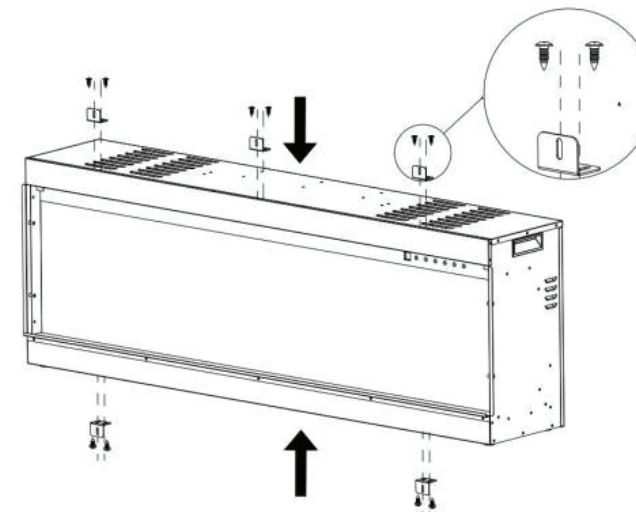


6. Make an opening for the fireplace

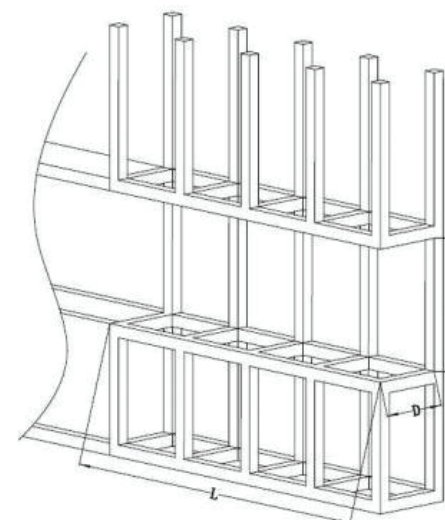


7. Insert the fireplace into the wall opening. Drive the mounting screws into the brackets and the wall studs. Plug in and check if the fireplace works properly. If so, move on to next step.

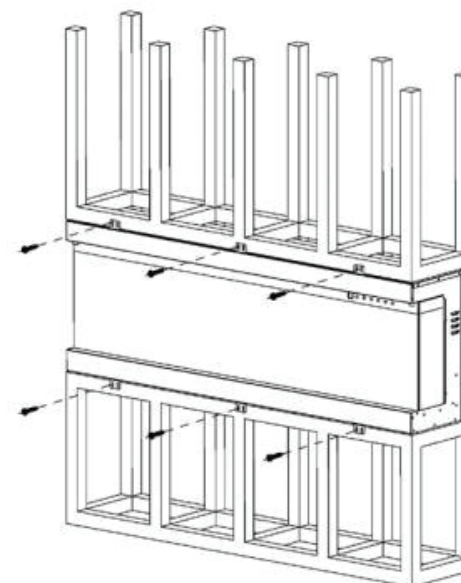

8. Cover the glass panel with protective plastic bag and install plywood or drywall.

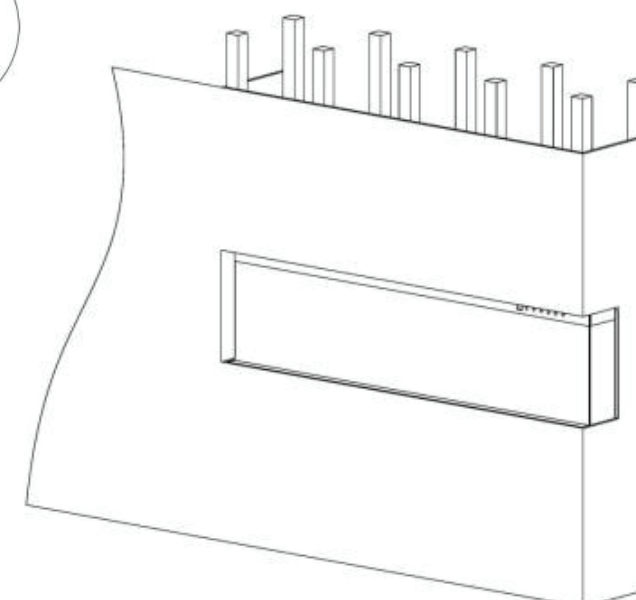


9. Decorate the plywood or drywall with glazed tile, wallpaper, etc.

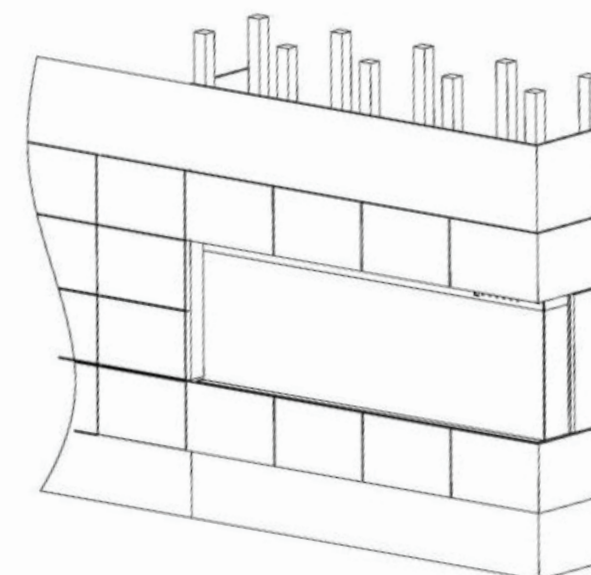


Decorative Crystal & Logs Ember Installation


1. Use the screw driver to take off the 4 screws.

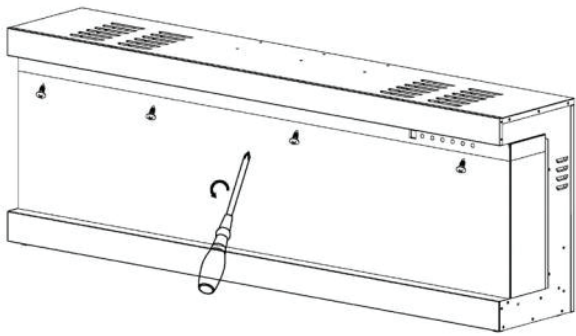


4. Place the decorative wood logs

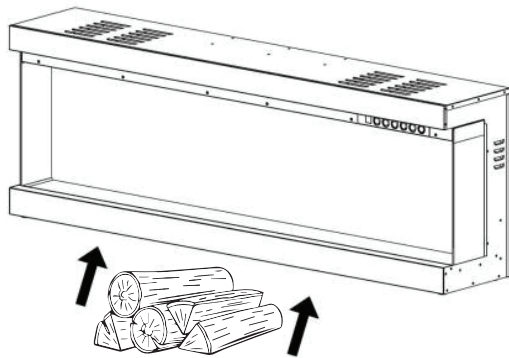


2. Have two people take out the glass panel and move it to a clean area taking care to avoid scratching.

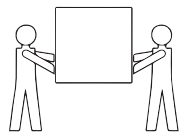

5. After placing the all decorative media, insert the glass panel back and fasten screws.

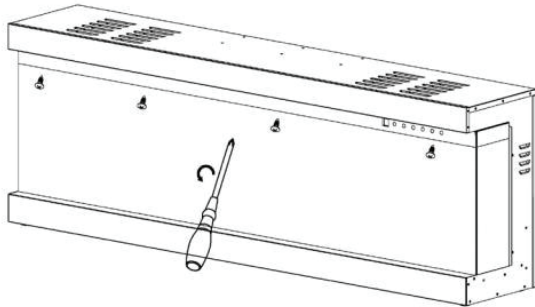

3. Place the decorative stones or pebbles on the media tray. Apply an even layer from side to side.

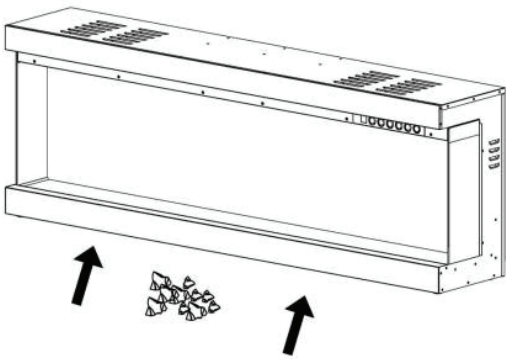

NL Belangrijke veiligheidsinformatie

Bij het gebruik van elektrische apparaten moeten altijd basisvoorzorgsmaatregelen worden gevolgd om het risico op brand, elektrische schokken en persoonlijk letsel te verminderen, waaronder de volgende:

- Lees alle instructies voordat u deze haard gebruikt.
- Deze verwarming is heet tijdens gebruik. Om verbranding te voorkomen, mag u het hete oppervlak niet aanraken. Gebruik, indien aanwezig, handgrepen bij het verplaatsen van deze kachel. Houd brandbare materialen, zoals meubels, kussens, beddengoed, papieren, kleding en gordijnen, op minimaal 1 meter afstand van de voorkant van de kachel en houd ze uit de buurt van de zijanten en achterkant. Om oververhitting te voorkomen, mag u de kachel niet afdekken.
- Uiterste voorzichtigheid is geboden wanneer een verwarmings-toestel wordt gebruikt in de buurt van kinderen of gehandicapten en wanneer het verwarmingstoestel in werking en onbeheerd wordt gelaten.
- Haal altijd de stekker uit het stopcontact als de haard niet wordt gebruikt.
- Gebruik geen verwarming met een beschadigd snoer of stekker of nadat de verwarming defect is, op welke manier dan ook beschadigd is gevallen. Breng de verwarming terug naar een erkende servicefaciliteit voor onderzoek, elektrische of mechanische afstelling of reparatie.
- Alleen voor gebruik binnenshuis, niet buitenshuis gebruiken.
- Deze verwarming is niet bedoeld voor gebruik in badkamers, wasruimtes en soortgelijke binnenlocaties.
- Plaats de heater nooit op een plek waar deze in een badkuip of ander waterreservoir kan vallen.
- Laat het snoer niet onder tapijt lopen. Bedek het snoer niet met vloerkleden, lopers of soortgelijke bedekkingen. Leg het snoer uit de buurt van het loopgebied.
- Om de verwarming los te koppelen, zet u de bedieningselementen op Uit en haalt u vervolgens de stekker uit het stopcontact.
- Steek geen vreemde voorwerpen in de ventilatie- of uitlaat-openingen en zorg ervoor dat er geen vreemde voorwerpen in terechtkomen, aangezien dit een elektrische schok of brand kan veroorzaken of de verwarming kan beschadigen.
- Om een mogelijke brand te voorkomen, mag u op geen enkele manier de luchtinlaat of -uitlaat blokkeren. Niet gebruiken op zachte oppervlakken, zoals een bed, waar de openingen vaak geblokkeerd raken.
- Een verwarming bevat hete, vonkende of vonkende onderdelen binnenin. Gebruik het niet in ruimtes waar benzine of brandbare vloeistoffen worden gebruikt of opgeslagen.
- Gebruik deze haard alleen zoals beschreven in deze handleiding. Elk ander gebruik dat niet door de fabrikant wordt aanbevolen, kan brand, elektrische schokken of persoonlijk letsel veroorzaken.
- **GEVAAR-HOOG** Onder bepaalde abnormale omstandigheden kunnen temperaturen ontstaan. Bedek of blokkeer de voorkant van deze kachel niet gedeeltelijk of volledig.
- Vervanging van de lampen mag alleen worden uitgevoerd als de verwarming is losgekoppeld van het voedingscircuit.

- Dit apparaat is niet bedoeld voor gebruik door personen (inclusief kinderen) met verminderde lichamelijke, zintuiglijke of vermogens, of een gebrek aan ervaring en kennis, tenzij ze toezicht hebben gekregen of instructies hebben gekregen over het gebruik van het apparaat door een persoon die verantwoordelijk is voor hun veiligheid. Er moet toezicht gehouden worden op kinderen om ervoor te zorgen dat ze niet met het apparaat spelen.
- **LET OP:** Om gevaar als gevolg van het onbedoeld resetten van de thermische beveiliging te voorkomen, mag dit apparaat niet worden gevoed via een extern schakelapparaat, zoals een timer, of worden aangesloten op een circuit dat regelmatig wordt in- en uitgeschakeld door de nutsvoorziening.

Vorbereitung

Dit product bevat een GLAZEN paneel! Wees altijd uiterst voorzichtig bij het hanteren van glas. Als u dit niet doet, kan dit leiden tot persoonlijk letsel of materiële schade.

Haal alle onderdelen en hardware uit de doos en plaats ze op een schoon, zacht en droog oppervlak. Onderdelen en montageschappen zijn gegroepeerd voor vrijstaand of aan de muur hangend gebruik. Controleer de onderdelenlijst om er zeker van te zijn dat er niets ontbreekt. Voer verpakkingsmateriaal op de juiste manier af. Recycle indien mogelijk.


U hebt het volgende gereedschap nodig (niet meegeleverd): kruiskopschroevendraaier; studzoeker; niveau; rolmaat; elektrische boor; 1/4" houtboor, hamer.

Onderdelen en hardware


 A-F fireplace	 B-W wood screws	 C-D wall anchors
	 D-E decorative logs	 E-D decorative pebbles
 F-D decorative crystals (Big & Small)	 G-Remote control	 H-Metal brackets

Installatie voor 3-zijdig vuurbeeld


1. De haard is links en rechts vastgezet met panelen.

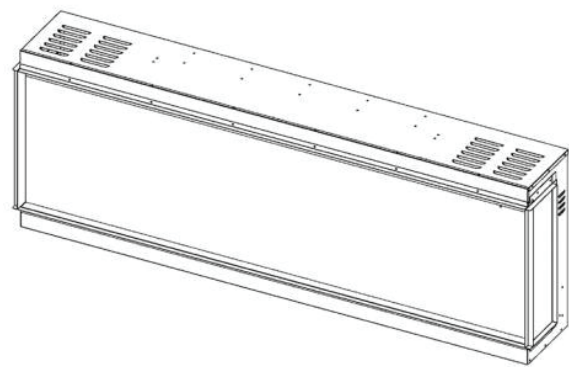


fending panel

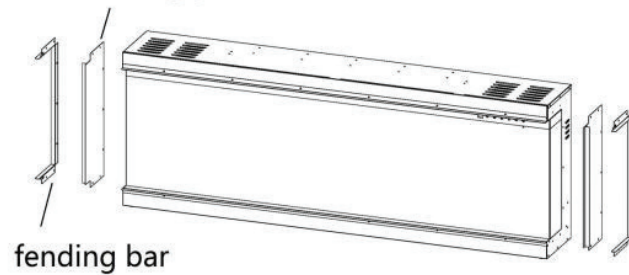


2. Als u het vuur van drie kanten wilt bekijken, kunt u de beschermingsbalken en panelen verwijderen.

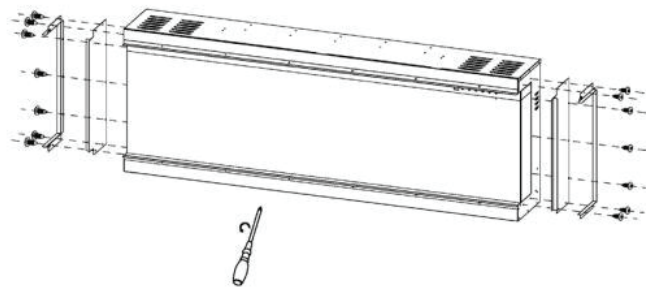


3. Bevestig de beschermbalken terug nadat de panelen zijn verwijderd.

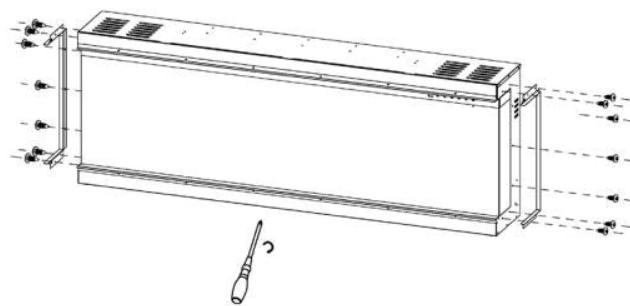


4. Verwijder de schroeven uit de haard zoals weergegeven in de onderstaande afbeelding.

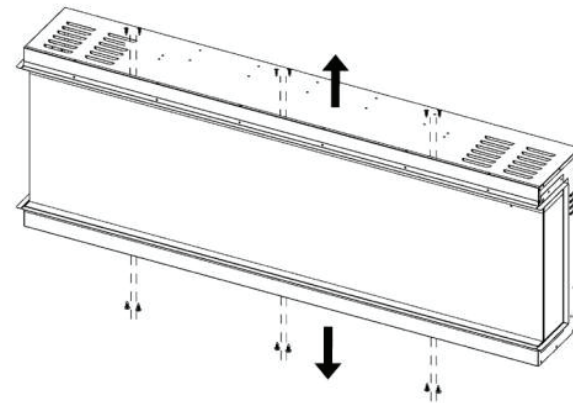


5. Bevestig de beugels met de schroeven uit de vorige stap.

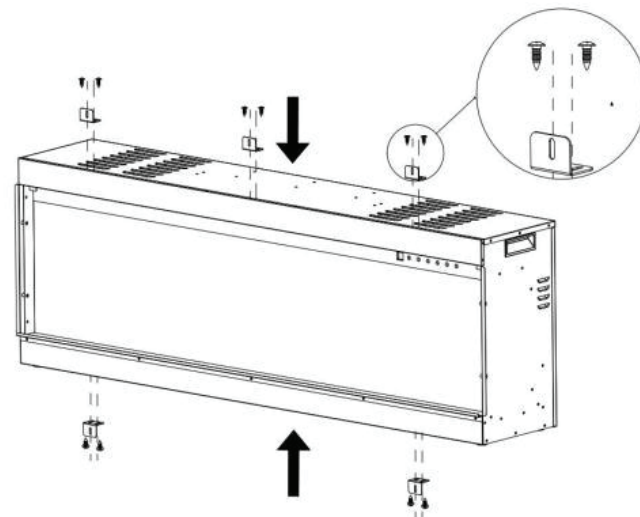


6. Maak een opening voor de open haard.

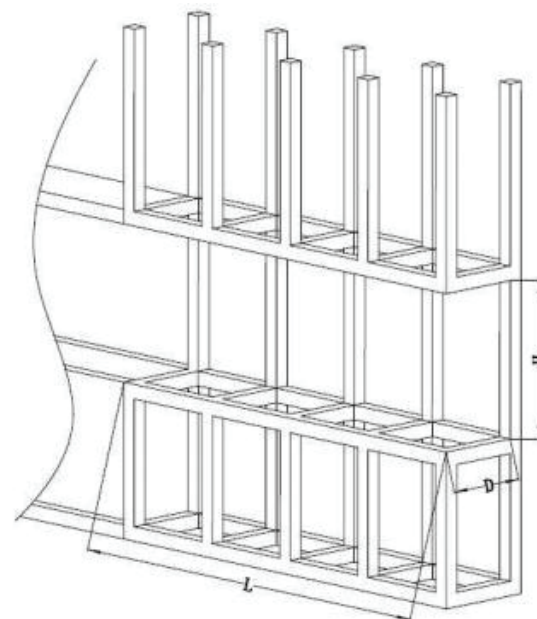


7. Plaats de haard in de muuropening. Draai de montageschroeven in de beugels en de muurstijlen. Sluit de stekker aan en controleer of de haard goed werkt. Als dit het geval is, gaat u verder met de volgende stap.

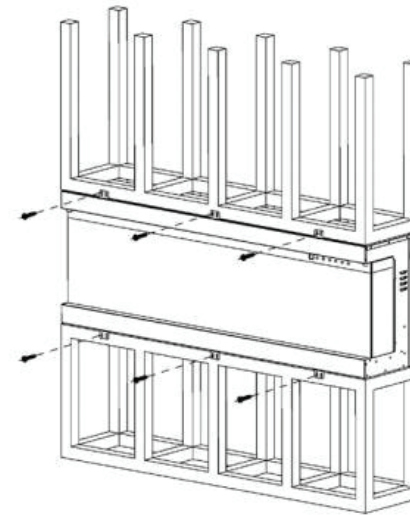

8. Bedek het glaspaneel met een beschermende plastic zak en installeer multiplex of gipsplaat.

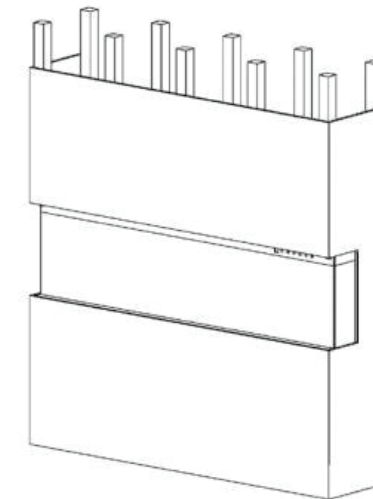


9. Versier het multiplex of de gipsplaat met geglazuurde tegels, behang, enz.

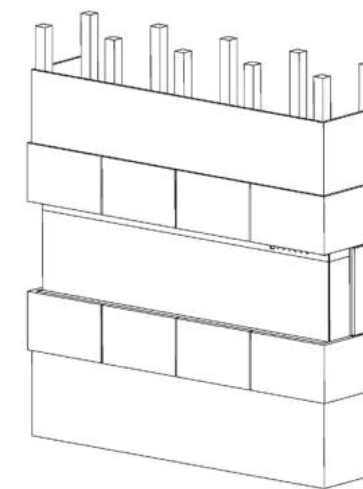


Installatie voor Voor en Links/rechts Zijaanzicht


1. Om de haard van voren en van links/rechts te bekijken, moet u het stootpaneel aan de gekozen kant verwijderen en de andere kant dicht bij een muur houden.

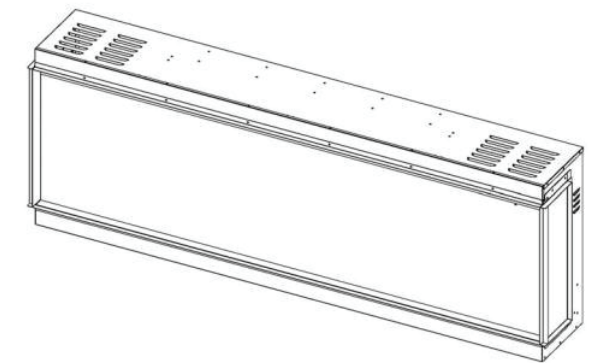


2. Verwijder de 7 schroeven aan de gekozen kant. Verwijder de beschermingsbalk en het paneel.

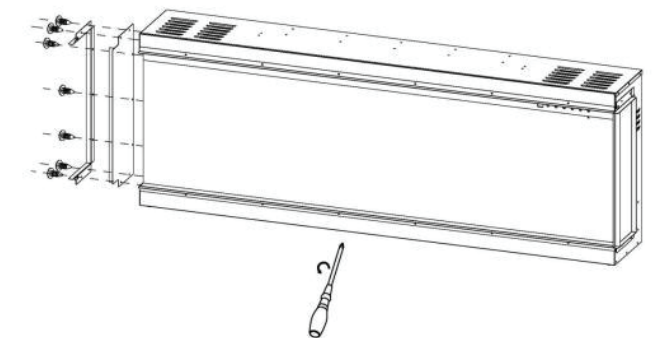


3. Bevestig de beschermingsbalk terug nadat het paneel is verwijderd.

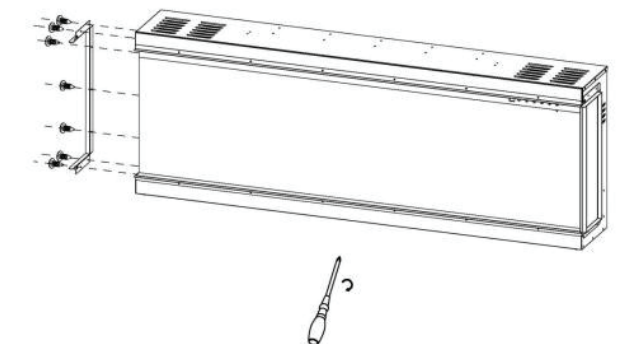


4. Verwijder de schroeven uit de haard zoals weergegeven in de onderstaande afbeelding.

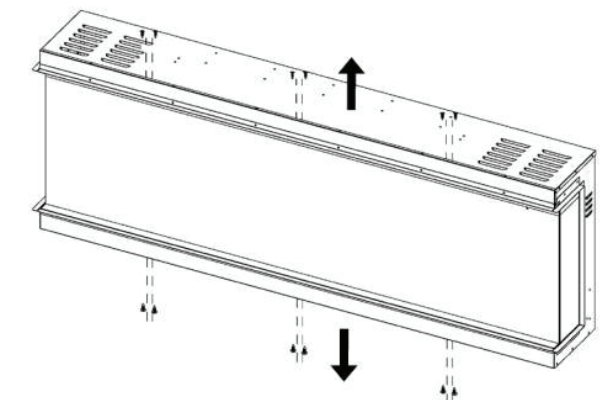


5. Bevestig de beugels met de schroeven uit de vorige stap.

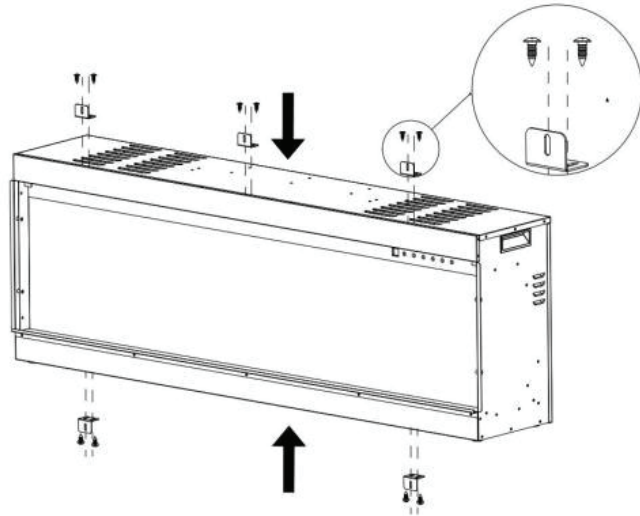


6. Maak een opening voor de open haard

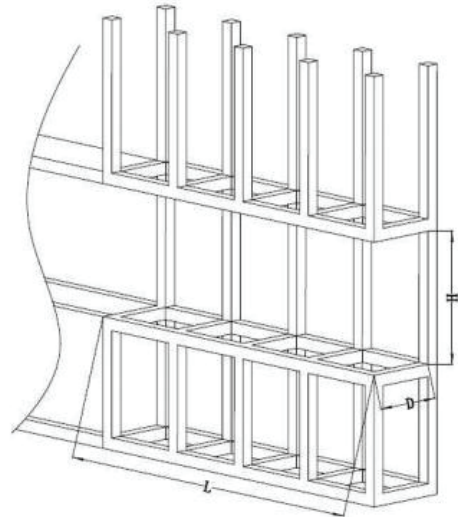


7. Plaats de haard in de muuropening. Draai de montageschroeven in de beugels en de muurstijlen. Sluit de stekker aan en controleer of de haard goed werkt. Als dit het geval is, gaat u verder met de volgende stap.

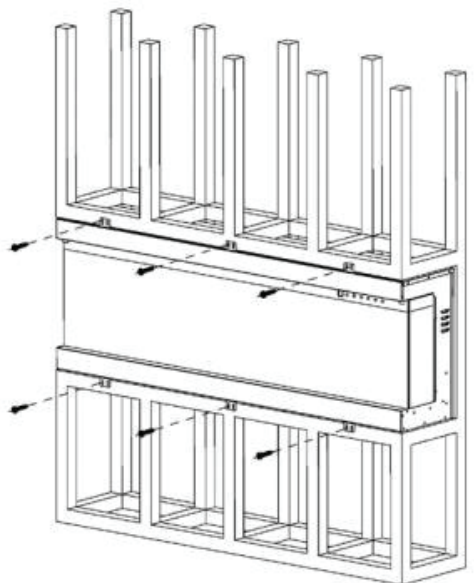

8. Bedek het glaspaneel met een beschermende plastic zak en installeer multiplex of gipsplaat.

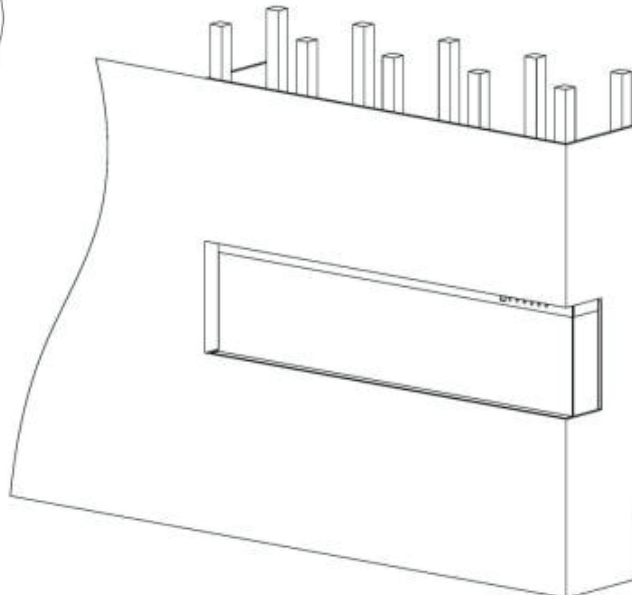


9. Versier het multiplex of de gipsplaat met geglazuurde tegels, behang, enz.

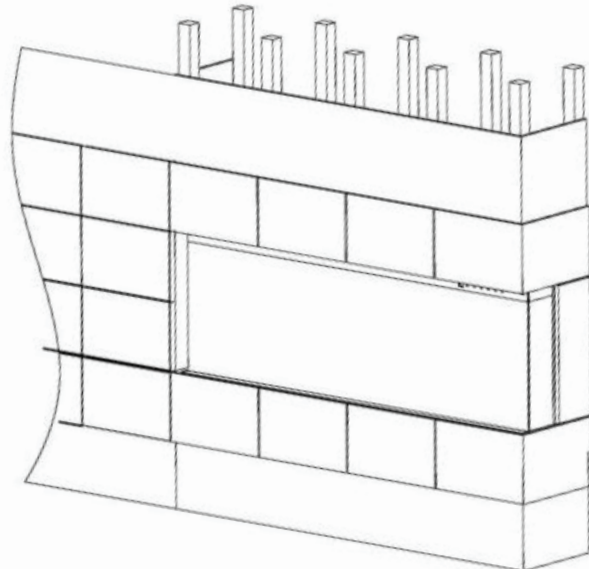


Decoratieve kiezelstenen en houtblokken installatie


1. Gebruik de schroevendraaier om de 4 schroeven te verwijderen.

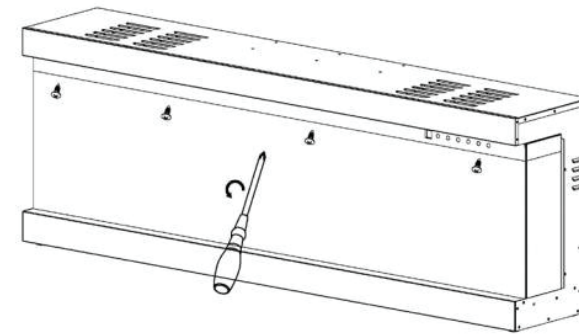


2. Laat twee personen het glaspaneel verwijderen en verplaats het voorzichtig naar een schone ruimte om krassen te voorkomen.

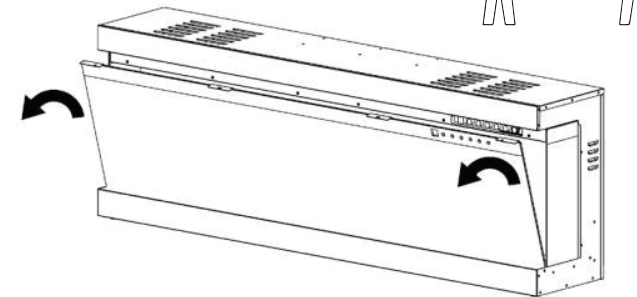


3. Plaats de decoratieve stenen of kiezelstenen in de haard. Breng een gelijkmatige laag aan van links naar rechts.

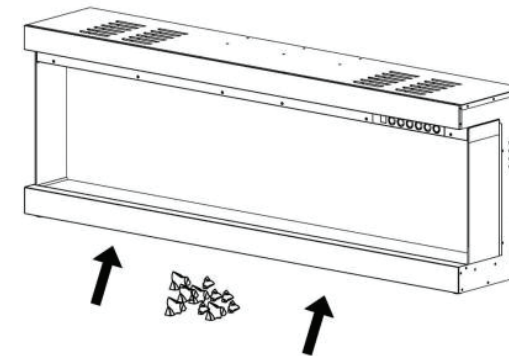

4. Plaats de decoratieve houtblokken

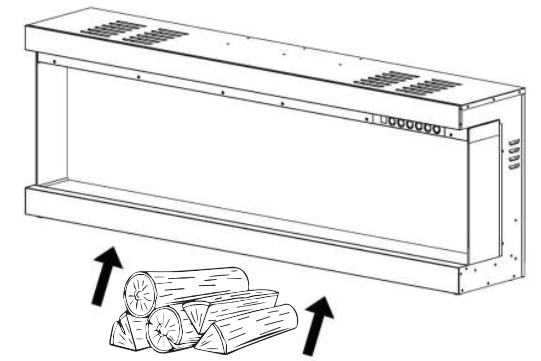

5. Nadat u alle decoratieve media hebt geplaatst, plaatst u het glaspaneel terug en draait u de schroeven vast.

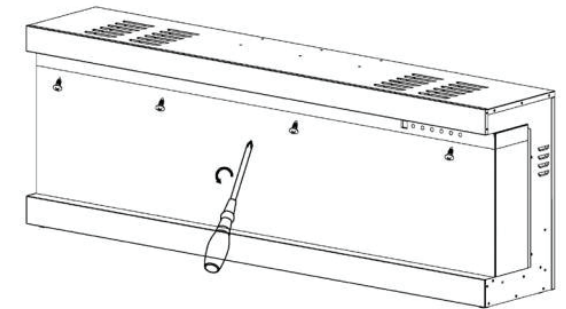

FR Informations de sécurité importantes ⚠

Lors de l'utilisation d'appareils électriques, des précautions de base doivent toujours être suivies pour réduire le risque d'incendie, de choc électrique et de blessures, notamment les suivantes :

- Lisez toutes les instructions avant d'utiliser ce foyer.
- Ce radiateur est chaud pendant son utilisation. Pour éviter les brûlures, ne touchez pas la surface chaude. Si disponible, utilisez les poignées pour déplacer ce radiateur. Gardez les matériaux inflammables, tels que les meubles, les coussins, la literie, les papiers, les vêtements et les rideaux, à au moins 1 mètre de l'avant du poêle et des côtés et de l'arrière. Pour éviter toute surchauffe, ne couvrez pas le radiateur.
- Une extrême prudence doit être exercée lorsqu'un radiateur est utilisé à proximité d'enfants ou de personnes handicapées et lorsque le radiateur est laissé en marche et sans surveillance.
- Retirez toujours la fiche de la prise lorsque le foyer n'est pas utilisé.
- N'utilisez pas un radiateur dont le cordon ou la fiche est endommagé ou si le radiateur est défectueux ou a été endommagé de quelque manière que ce soit. Renvoyez le radiateur à un centre de service agréé pour examen, réglage électrique ou mécanique ou réparation.
- Pour une utilisation en intérieur uniquement, ne pas utiliser en extérieur.
- Ce radiateur n'est pas destiné à être utilisé dans les salles de bains, les buanderies et autres lieux intérieurs similaires.
- Ne placez jamais le radiateur dans un endroit où il pourrait tomber dans une baignoire ou un autre réservoir d'eau.
- Ne faites pas passer le cordon sous le tapis. Ne couvrez pas le cordon avec des tapis, des tapis ou des revêtements similaires. Éloignez le cordon de la zone de marche.
- Pour débrancher le radiateur, réglez les commandes sur Off, puis débranchez le radiateur.
- N'insérez pas et ne laissez pas d'objets étrangers pénétrer dans les ouvertures de ventilation ou d'évacuation, car cela pourrait provoquer un choc électrique, un incendie ou endommager le radiateur.
- Pour éviter un éventuel incendie, ne bloquez en aucun cas l'entrée ou la sortie d'air. Ne pas utiliser sur des surfaces molles, comme un lit, où les ouvertures sont souvent bloquées.
- Un appareil de chauffage contient des pièces chaudes, produisant des arcs électriques ou des arcs électriques à l'intérieur. Ne l'utilisez pas dans des zones où de l'essence ou des liquides inflammables sont utilisés ou stockés.
- Utilisez ce foyer uniquement comme décrit dans ce manuel. Toute autre utilisation non recommandée par le fabricant peut provoquer un incendie, un choc électrique ou des blessures.
- **DANGER DES températures ÉLEVÉES** peuvent se développer dans certaines conditions anormales. Ne couvrez pas ou ne bloquez pas partiellement ou complètement l'avant de ce radiateur.
- Le remplacement des lampes ne doit être effectué que lorsque le radiateur est débranché du circuit électrique.

- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) ayant des capacités physiques, sensorielles ou mentales réduites, ou un manque d'expérience et de connaissances, à moins qu'elles n'aient reçu une surveillance ou des instructions concernant l'utilisation de l'appareil par une personne responsable de leur sécurité. . Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil.
- **ATTENTION** : Pour éviter les risques dus à une réinitialisation accidentelle du protecteur thermique, cet appareil ne doit pas être alimenté à partir d'un dispositif de commutation externe, tel qu'une minuterie, ou connecté à un circuit qui est régulièrement allumé et éteint par le service public.

 
 
 
Préparation ⚠

Ce produit contient un panneau en VERRE ! Soyez toujours extrêmement prudent lorsque vous manipulez du verre. Ne pas le faire pourrait entraîner des blessures ou des dommages matériels.

Retirez toutes les pièces et le matériel de la boîte et placez-les sur une surface propre, douce et sèche. Les pièces et les étapes d'assemblage sont regroupées pour une utilisation autonome ou suspendue au mur. Vérifiez la liste des pièces pour vous assurer que rien ne manque. Éliminez correctement les matériaux d'emballage. Recyclez si possible.


Vous aurez besoin des outils suivants (non inclus) :
Tournevis cruciforme; chercheur d'étalons; niveau; mètre à ruban; perceuse électrique; Perceuse à bois 1/4", marteau.

Pièces et matériel


 A -F ireplace	 B -W oodS crews	 C -D rywall Anchors
	 D -D ecorativeL ogs	 E -D ecorativeP ebbles
 F -D ecorativeC rystals (Big &S mall)	 G - RemoteC ontrol	 H - MetalB rackets

Installation pour image de feu à 3 côtés


1. Le foyer est sécurisé à gauche et à droite par des panneaux.

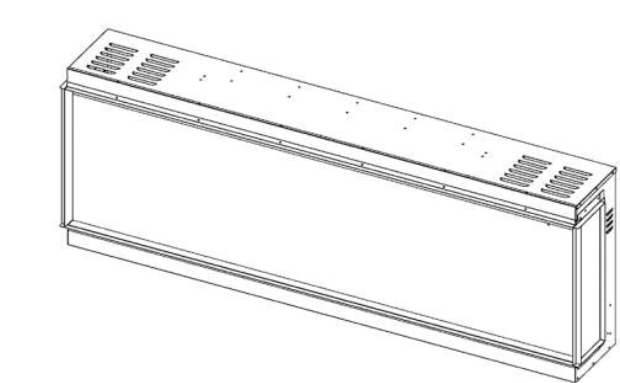


fending panel

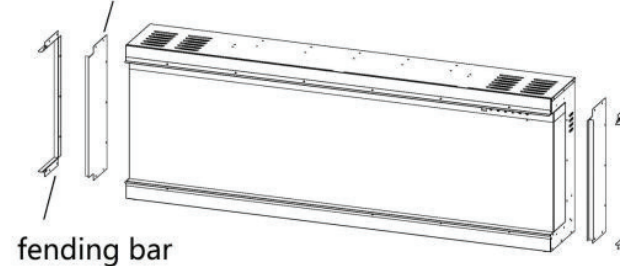


2. Si vous souhaitez voir le feu de trois côtés, vous pouvez retirer les poutres et les panneaux de protection.

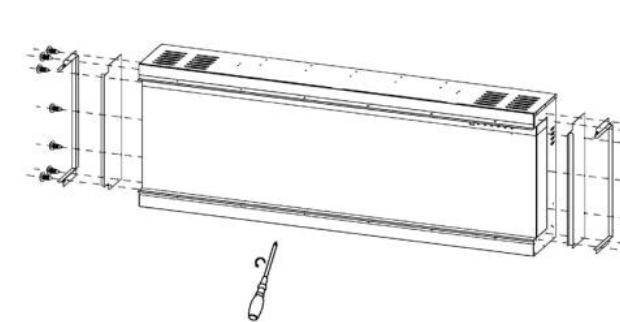


3. Refixez les barres de protection une fois les panneaux posés. supprimé.

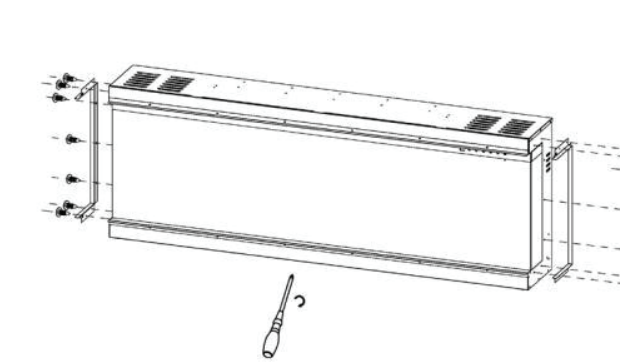


4. Retirez les vis du foyer comme indiqué dans l'image ci-dessous.

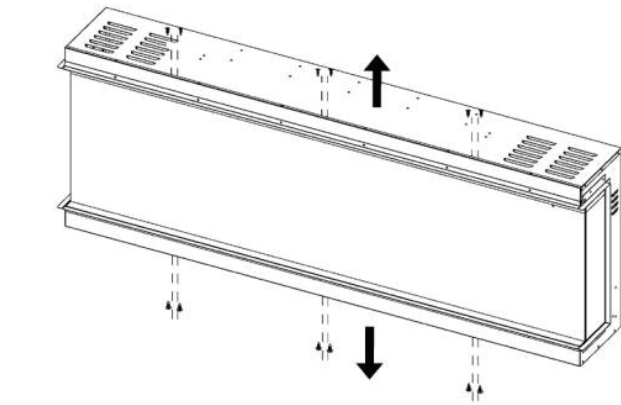


5. Fixez les supports avec les vis de l'étape précédente.

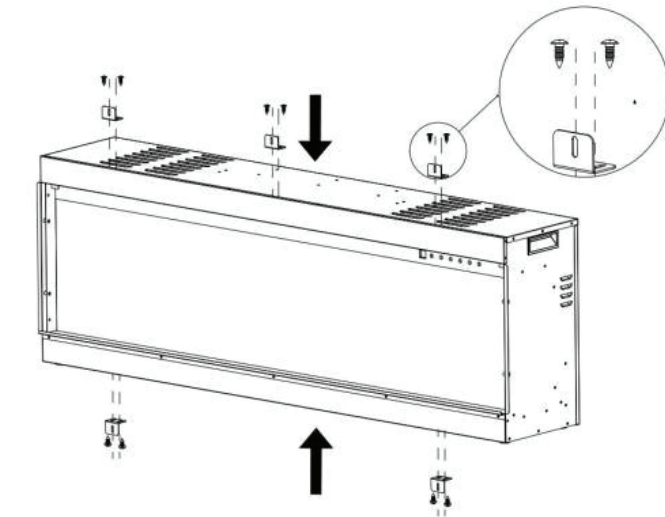


6. Faites une ouverture pour la cheminée.

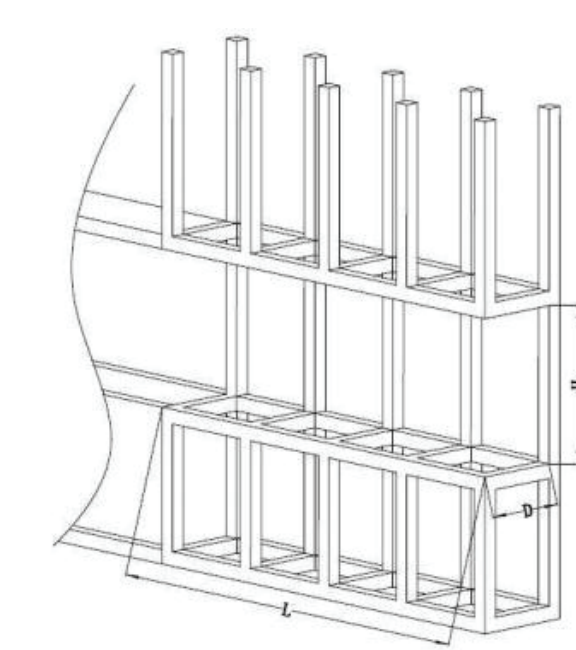


7. Placez le foyer dans l'ouverture du mur. Serrez les vis de montage dans les supports et les montants muraux. Branchez la fiche et vérifiez si le foyer fonctionne correctement. Si tel est le cas, passez à l'étape suivante.

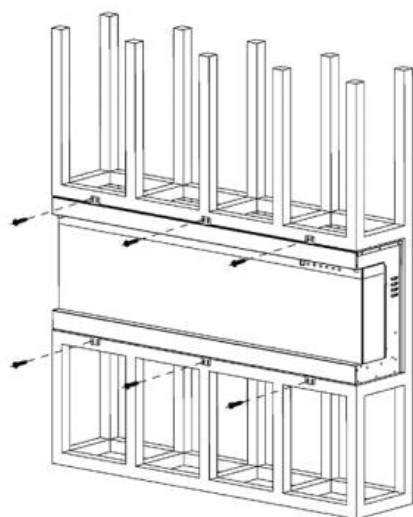

8. Couvrez le panneau de verre avec un sac en plastique protecteur et installez du contreplaqué ou des cloisons sèches.

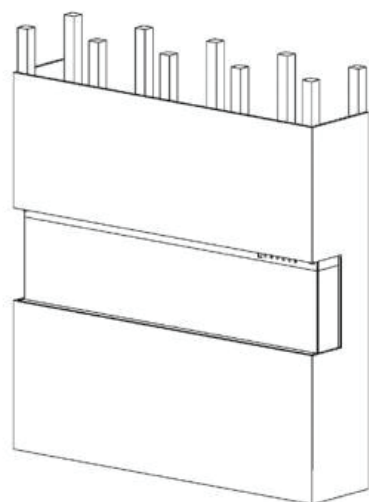


9. Décorez le contreplaqué ou les cloisons sèches avec des carreaux vernissés, du papier peint, etc.

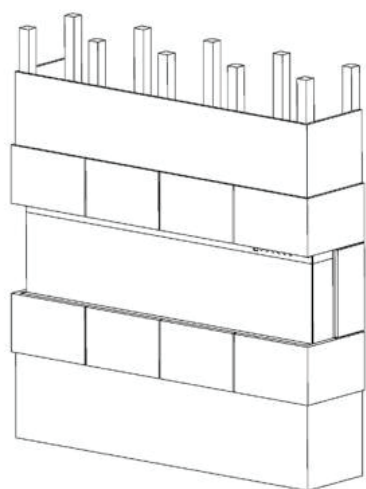


Installation pour l'avant et la gauche/droite Vue de côté


1. Pour voir le foyer de face et de gauche/droite, retirez le panneau de protection du côté choisi et maintenez l'autre côté près d'un mur.

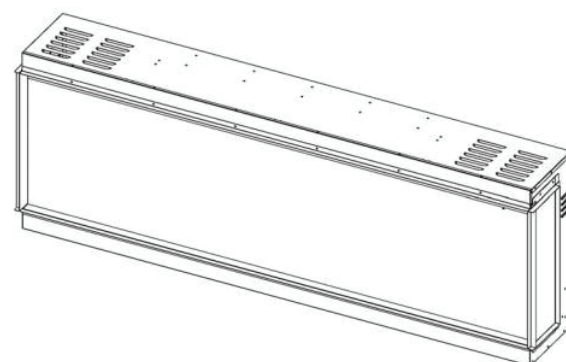


2. Retirez les 7 vis du côté choisi. Retirez la barre de protection et le panneau.

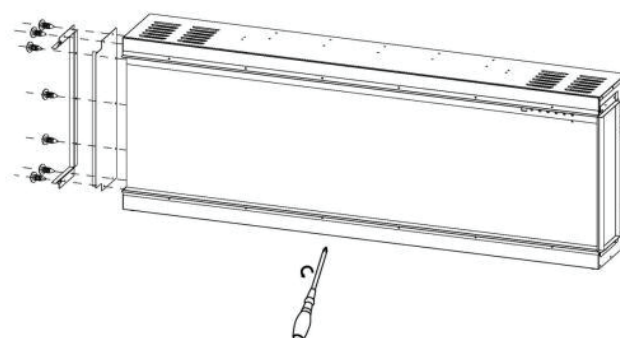


3. Remettez la barre de protection en place une fois le panneau supprimé.

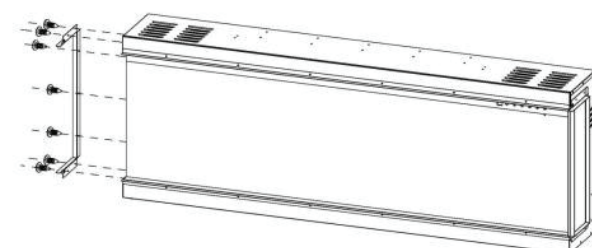


4. Retirez les vis du foyer comme indiqué dans l'image ci-dessous.

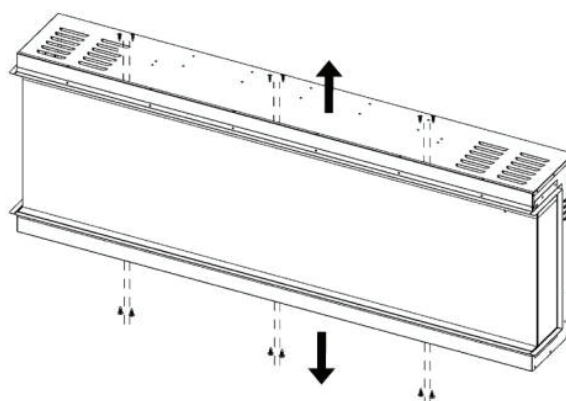


5. Fixez les supports avec les vis de l'étape précédente.

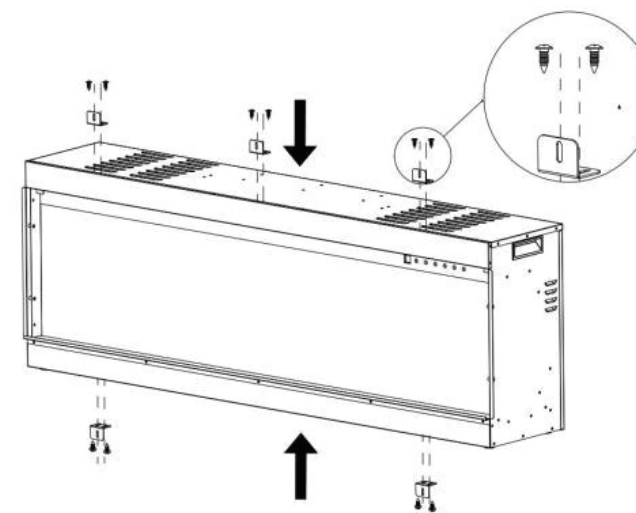


6. Faire une ouverture pour la cheminée

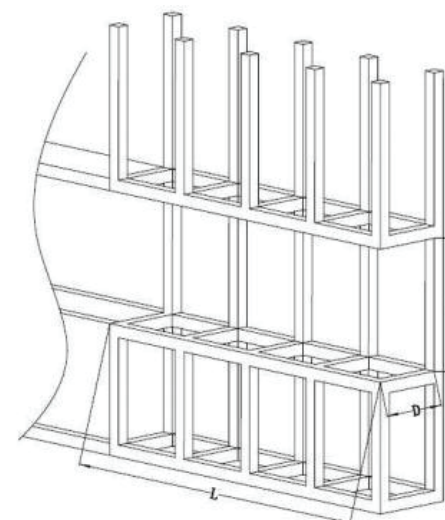


7. Placez le foyer dans l'ouverture du mur. Serrez les vis de montage dans les supports et les montants muraux. Branchez la fiche et vérifiez si le foyer fonctionne correctement. Si tel est le cas, passez à l'étape suivante.

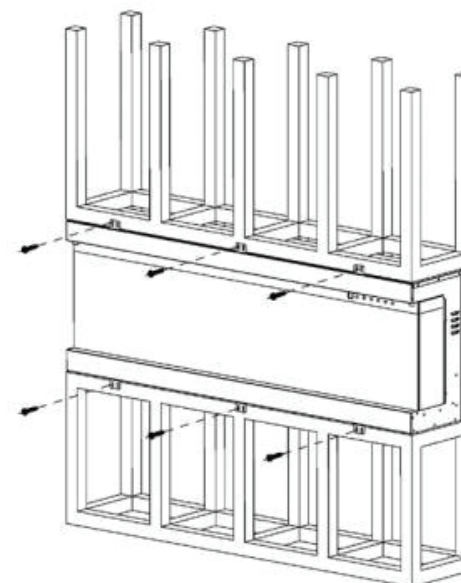

8. Couvrez le panneau de verre avec un sac en plastique protecteur et installez du contreplaqué ou des cloisons sèches.

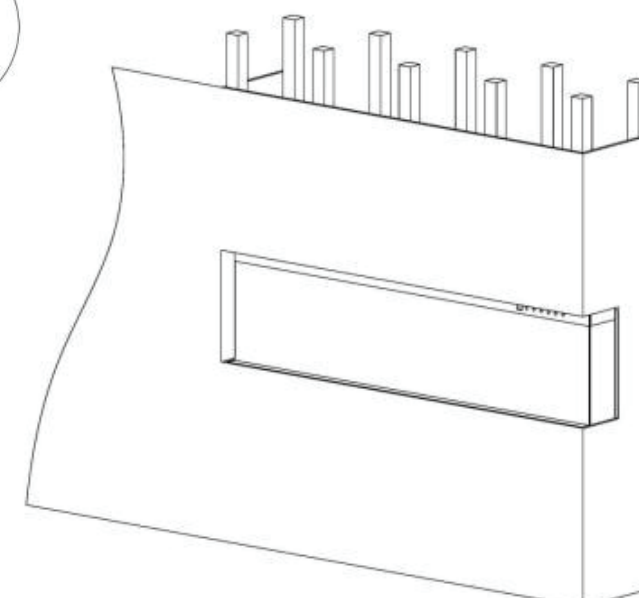


9. Décorez le contreplaqué ou les cloisons sèches avec des carreaux vernissés, du papier peint, etc.

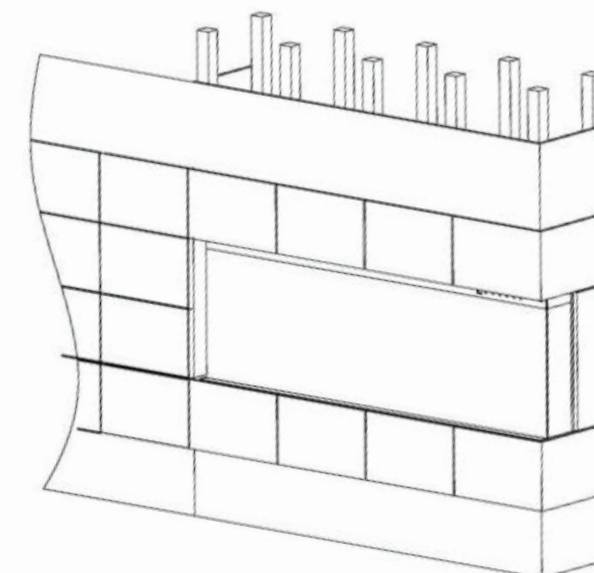

Pose de galets décoratifs et blocs de bois


1. Utilisez le tournevis pour retirer les 4 vis.

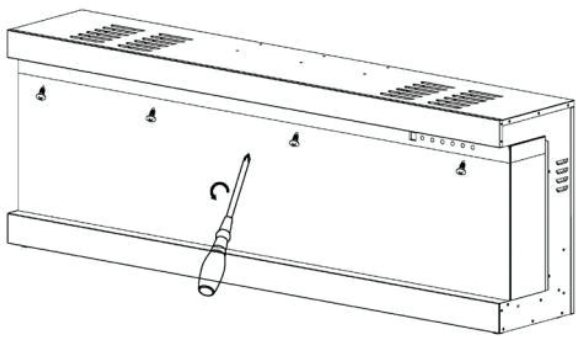


2. Demandez à deux personnes de retirer le panneau de verre et déplacez-le soigneusement vers un endroit propre Espace pour éviter les rayures.




3. Placez les pierres ou galets décoratifs dans la cheminée. Appliquez une couche uniforme de gauche à droite.

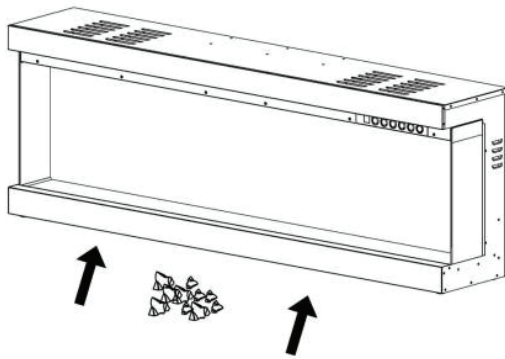

4. Placez les bûches décoratives

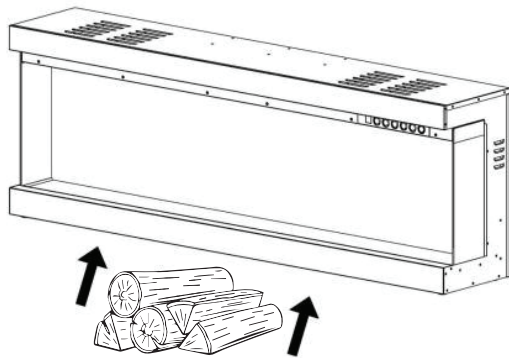

5. Une fois que vous avez placé tous les supports décoratifs, re-placez le panneau de verre et serrez les vis.

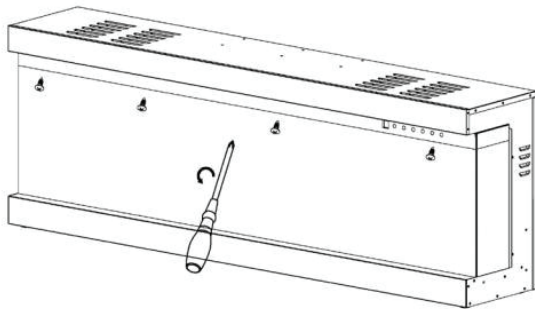

DE Wichtige Sicherheitshinweise

Bei der Verwendung von Elektrogeräten sollten stets grundlegende Vorsichtsmaßnahmen befolgt werden, um das Risiko von Bränden, Stromschlägen und Verletzungen zu verringern, einschließlich der folgenden:

- Lesen Sie alle Anweisungen, bevor Sie diesen Kamin verwenden.
- Dieses Heizgerät ist während des Gebrauchs heiß. Berühren Sie die heiße Oberfläche nicht, um Verbrennungen zu vermeiden. Wenn vorhanden, verwenden Sie zum Bewegen dieses Heizgeräts Griffe. Halten Sie brennbare Materialien wie Möbel, Kissen, Bettwäsche, Papiere, Kleidung und Vorhänge mindestens 1 Meter von der Vorderseite des Ofens sowie von den Seiten und der Rückseite entfernt. Um eine Überhitzung zu vermeiden, decken Sie das Heizgerät nicht ab.
- Es ist äußerste Vorsicht geboten, wenn ein Heizgerät in der Nähe von Kindern oder behinderten Personen verwendet wird und wenn das Heizgerät in Betrieb und unbeaufsichtigt bleibt.
- Ziehen Sie immer den Stecker aus der Steckdose, wenn der Kamin nicht verwendet wird.
- Benutzen Sie das Heizgerät nicht, wenn das Kabel oder der Stecker beschädigt ist oder das Heizgerät defekt ist oder in irgendeiner Weise beschädigt wurde. Bringen Sie das Heizgerät zur Überprüfung, elektrischen oder mechanischen Einstellung oder Reparatur zu einer autorisierten Serviceeinrichtung.
- Nur zur Verwendung im Innenbereich, nicht im Freien verwenden.
- Dieses Heizgerät ist nicht für den Einsatz in Badezimmern, Waschküchen und ähnlichen Innenräumen bestimmt.
- Stellen Sie das Heizgerät niemals an einem Ort auf, an dem es in eine Badewanne oder einen anderen Wasserbehälter fallen kann.
- Verlegen Sie das Kabel nicht unter dem Teppich. Decken Sie das Kabel nicht mit Teppichen, Läufern oder ähnlichen Abdeckungen ab. Platzieren Sie das Kabel außerhalb des Gehbereichs.
- Um die Heizung auszuschalten, stellen Sie die Bedienelemente auf „Aus“ und ziehen Sie dann den Stecker aus der Steckdose.
- Führen Sie keine Fremdkörper in die Lüftungs- oder Abluftöffnungen ein und lassen Sie sie nicht eindringen, da dies zu einem Stromschlag oder einem Brand führen oder das Heizgerät beschädigen kann.
- Um einen möglichen Brand zu verhindern, blockieren Sie den Lufteinlass oder -auslass in keiner Weise. Nicht auf weichen Oberflächen wie einem Bett verwenden, wo die Öffnungen oft verstopft sind.
- Ein Heizgerät enthält im Inneren heiße, lichtbogenförmige oder lichtbogenbildende Teile. Verwenden Sie es nicht in Bereichen, in denen Benzin oder brennbare Flüssigkeiten verwendet oder gelagert werden.
- Benutzen Sie diesen Kamin nur wie in dieser Anleitung beschrieben. Jede andere vom Hersteller nicht empfohlene Verwendung kann zu Bränden, Stromschlägen oder Verletzungen führen.
- **GEFAHR-HOHE** Temperaturen können unter bestimmten anormalen Bedingungen auftreten. Decken oder blockieren Sie die Vorderseite dieses Heizgeräts weder teilweise noch vollständig.
- Der Austausch der Lampen sollte nur durchgeführt werden, wenn das Heizgerät vom Stromkreis getrennt ist. Anweisungen, bevor Sie diesen Kamin verwenden.

- Dieses Gerät ist nicht für die Verwendung durch Personen (einschließlich Kinder) mit eingeschränkten physischen, sensorischen oder geistigen Fähigkeiten oder mangelnder Erfahrung und Wissen bestimmt, es sei denn, sie werden von einer für ihre Sicherheit verantwortlichen Person beaufsichtigt oder in die Verwendung des Geräts eingewiesen. Kinder müssen beaufsichtigt werden, um sicherzustellen, dass sie nicht mit dem Gerät spielen.
- **VORSICHT:** Um Gefahren durch unbeabsichtigtes Zurücksetzen des Thermoschutzes zu vermeiden, sollte dieses Gerät nicht über ein externes Schaltgerät, z. B. einen Timer, mit Strom versorgt oder an einen Stromkreis angeschlossen werden, der regelmäßig vom Energieversorger ein- und ausgeschaltet wird.

Vorbereitung

Dieses Produkt enthält eine GLASScheibe! Seien Sie beim Umgang mit Glas stets äußerst vorsichtig. Andernfalls kann es zu Personen- oder Sachschäden kommen.

Nehmen Sie alle Teile und Hardware aus der Verpackung und legen Sie sie auf eine saubere, weiche und trockene Oberfläche. Teile und Montageschritte sind für den freistehenden oder wandhängenden Einsatz gruppiert. Überprüfen Sie die Teileliste, um sicherzustellen, dass nichts fehlt. Verpackungsmaterialien ordnungsgemäß entsorgen. Wenn möglich recyceln.


Sie benötigen folgende Werkzeuge (nicht im Lieferumfang enthalten): Kreuzschlitzschraubendreher; Hengstsuchender; Ebene; Maßband; elektrische Bohrmaschine; 1/4-Zoll-Holzbohrer, Hammer.

Teile und Hardware


 A - Fireplace unit	 B - Wood screws	 C - Drywall anchors
	 D - Decorative logs	 E - Decorative pebbles
 F - Decorative crystals (Big & Small)	 G - Remote control	 H - Metal brackets

Installation für 3-seitiges Feuerbild


1. Der Kamin ist links und rechts mit Blenden gesichert.

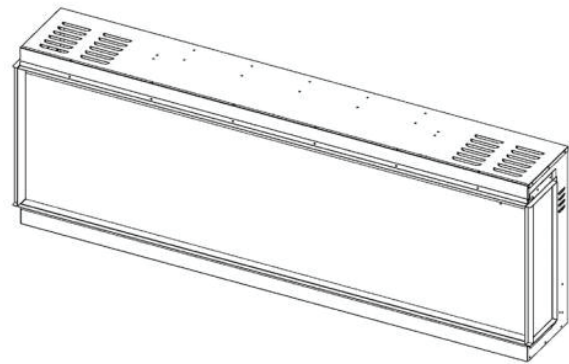


fending panel

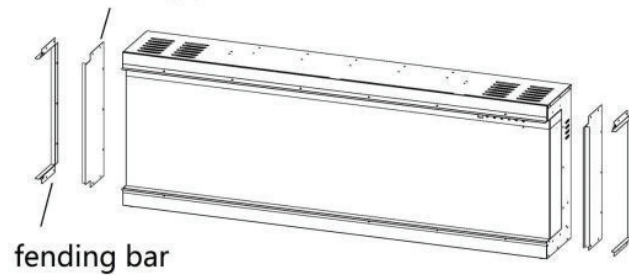


2. Wenn Sie das Feuer von drei Seiten betrachten möchten, können Sie die Schutz balken und -platten entfernen.

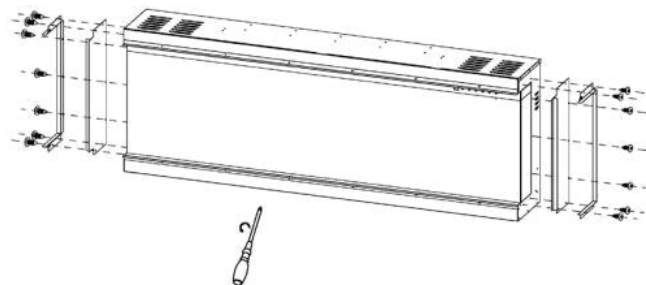


3. Bringen Sie die Schutzstangen wieder an, nachdem die Paneele montiert sind gelöscht.

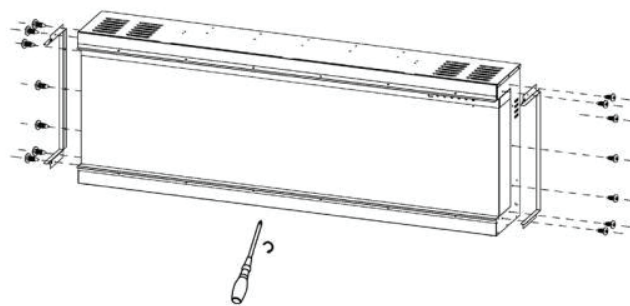


4. Entfernen Sie die Schrauben vom Kamin, wie in der Abbildung unten gezeigt.

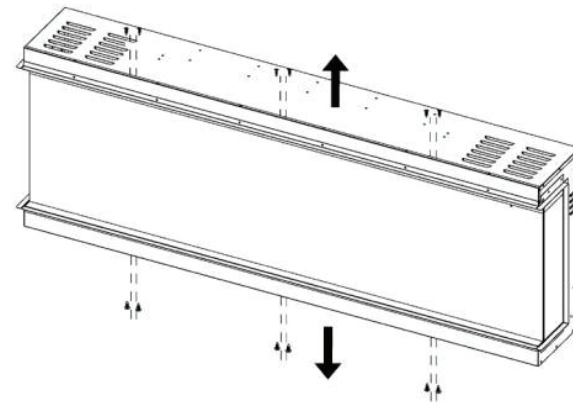


5. Befestigen Sie die Halterungen mit den Schrauben aus dem vorherigen Schritt.

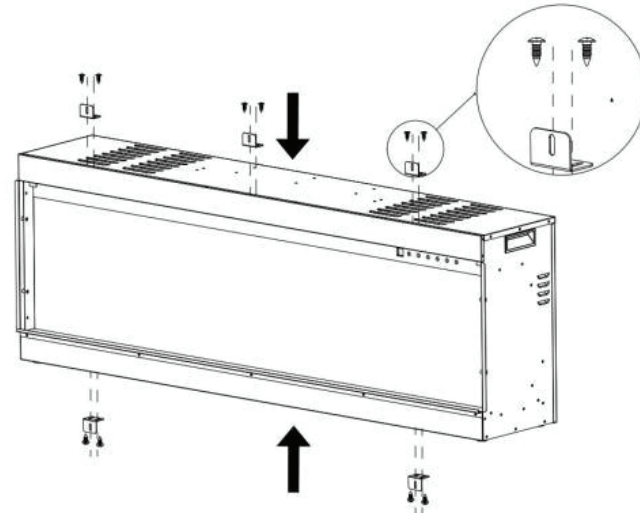


6. Machen Sie eine Öffnung für den Kamin.

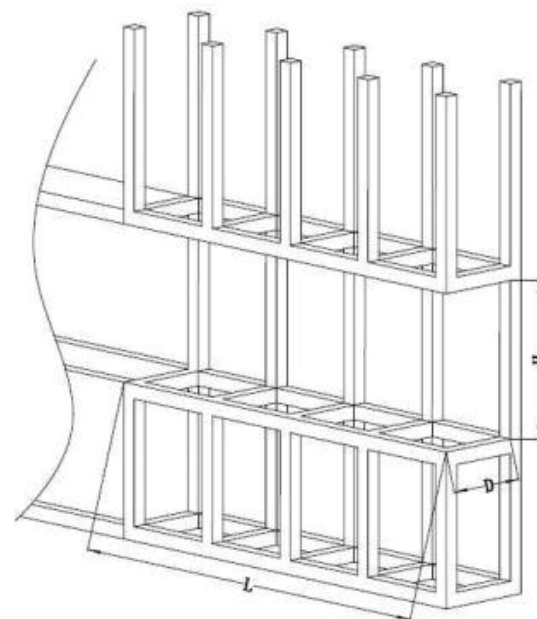

7. Platzieren Sie den Kamin in der Wandöffnung. Ziehen Sie die Befestigungsschrauben in den Halterungen und Wandbolzen fest. Stecker anschließen und Überprüfen Sie, ob der Kamin ordnungsgemäß funktioniert. Wenn ja, fahren Sie mit dem nächsten Schritt fort.

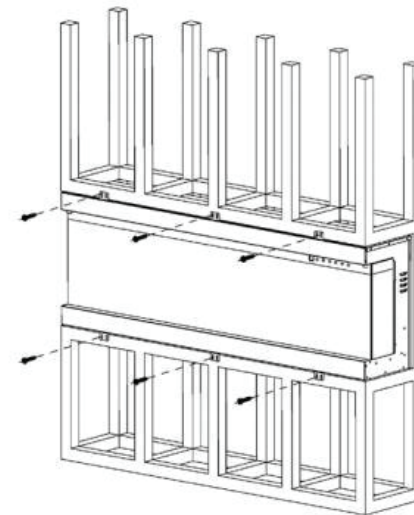

8. Decken Sie die Glasscheibe mit einer schützenden Plastiktüte ab und installieren Sie Sperrholz oder Trockenbau.

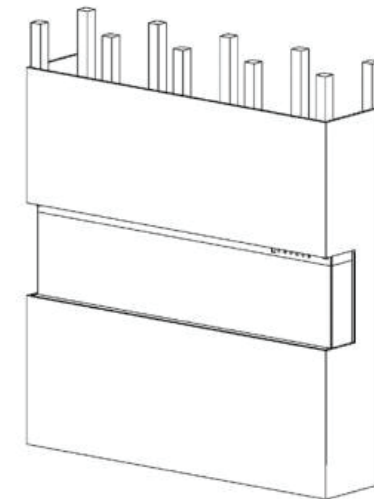


9. Dekorieren Sie die Sperrholz- oder Trockenbauwand mit glasierten Fliesen, Tapeten usw.




Montage für vorne und links/rechts Seitenansicht


1. Um den Kamin von vorne und von links/rechts zu betrachten, entfernen Sie die Trittplatte auf der gewählten Seite und halten Sie die andere Seite nahe an eine Wand.

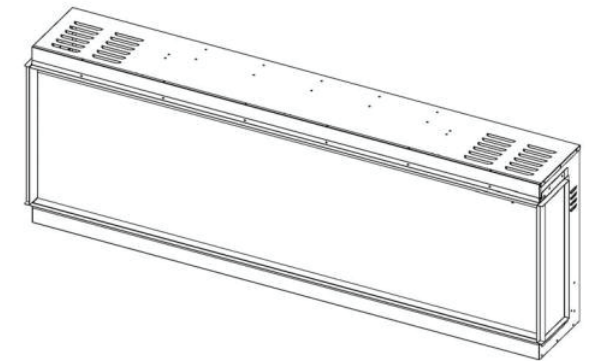


2. Entfernen Sie die 7 Schrauben auf der gewählten Seite. Entfernen Sie den Schutzbügel und die Verkleidung.

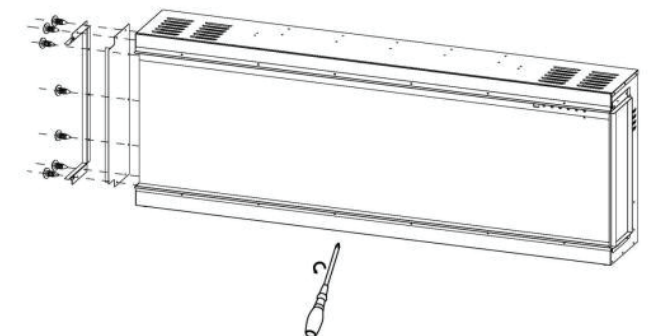


3. Bringen Sie die Schutzleiste wieder an, nachdem die Platte montiert ist gelöscht.

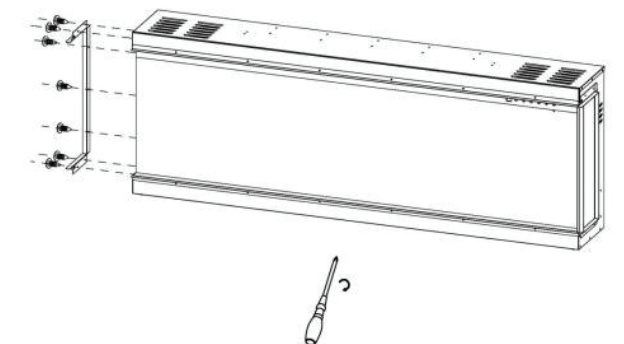


4. Entfernen Sie die Schrauben vom Kamin, wie in der Abbildung unten gezeigt.

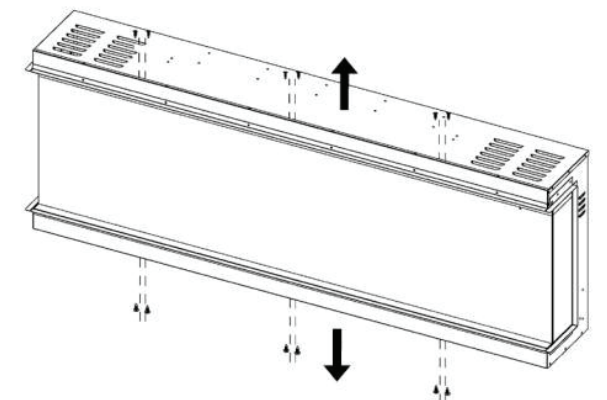


5. Befestigen Sie die Halterungen mit den Schrauben aus dem vorherigen Schritt.

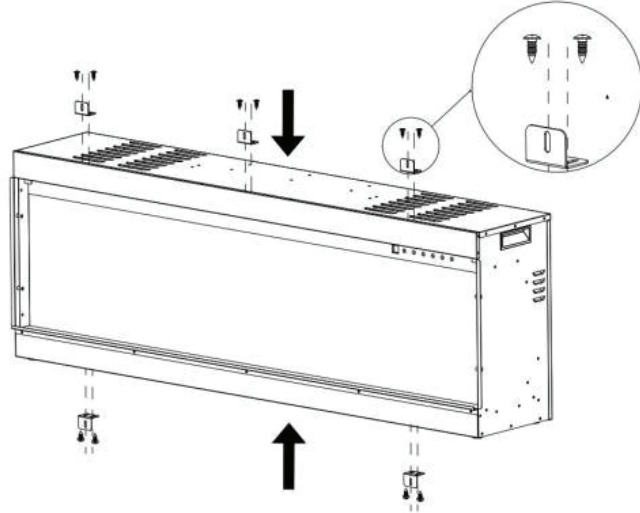


6. Machen Sie eine Öffnung für den Kamin

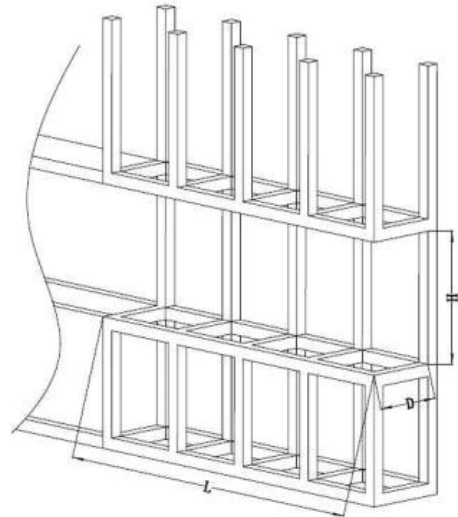


7. Platzieren Sie den Kamin in der Wandöffnung. Ziehen Sie die Befestigungsschrauben in den Halterungen und Wandbolzen fest. Schließen Sie den Stecker an und prüfen Sie, ob der Kamin ordnungsgemäß funktioniert. Wenn ja, fahren Sie mit dem nächsten Schritt fort.

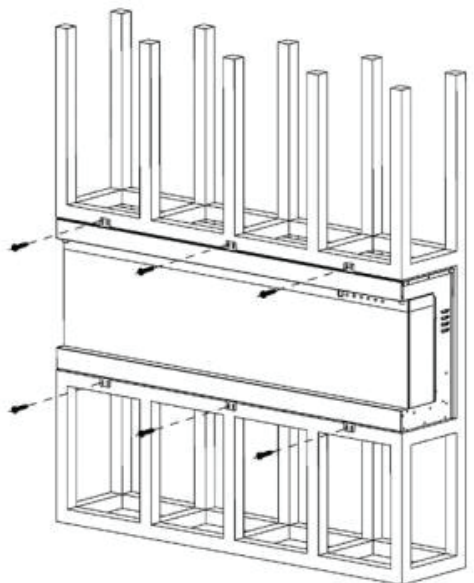

8. Decken Sie die Glasscheibe mit einer schützenden Plastiktüte ab und installieren Sie Sperrholz oder Trockenbau.

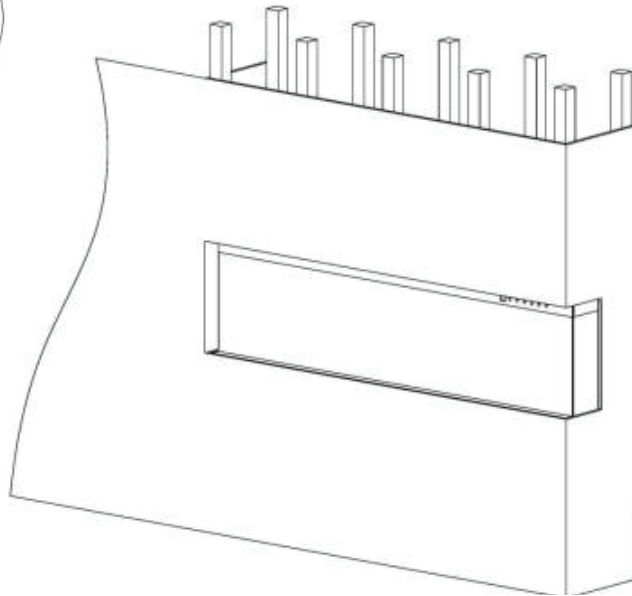


9. Dekorieren Sie die Sperrholz- oder Trockenbauwand mit glasierten Fliesen, Tapeten usw.


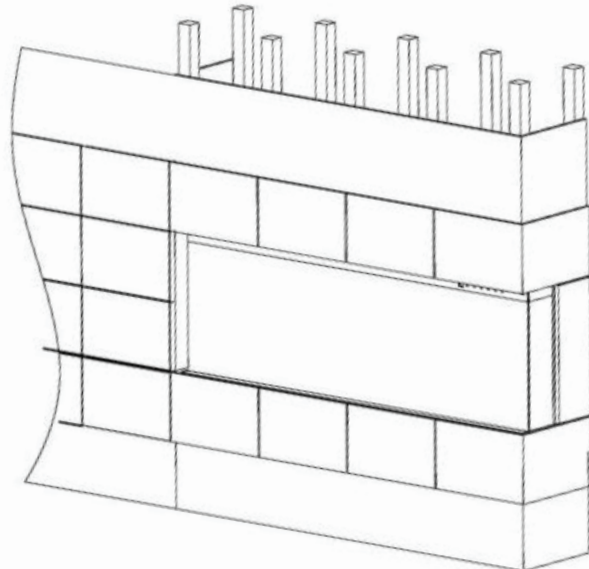


Installation von dekorativen Kieselsteinen und Holzblöcken


1. Entfernen Sie die 4 Schrauben mit dem Schraubendreher.

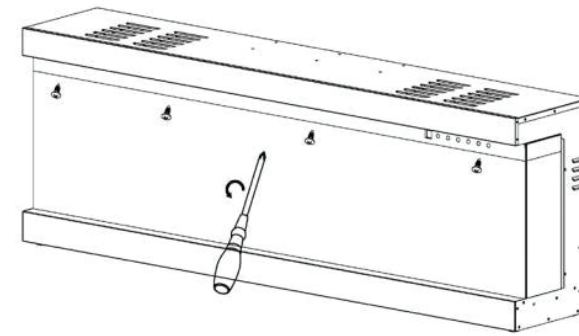


2. Lassen Sie die Glasscheibe von zwei Personen entfernen und stellen Sie es vorsichtig auf ein sauberes Platz, um Kratzer zu vermeiden.

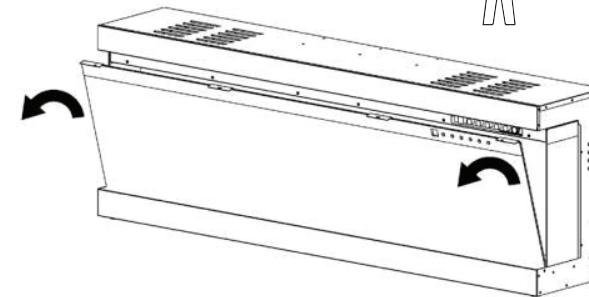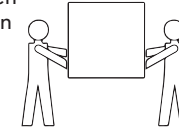


3. Legen Sie die Dekosteine oder Kieselsteine in den Kamin. Tragen Sie eine gleichmäßige Schicht von links nach rechts auf.

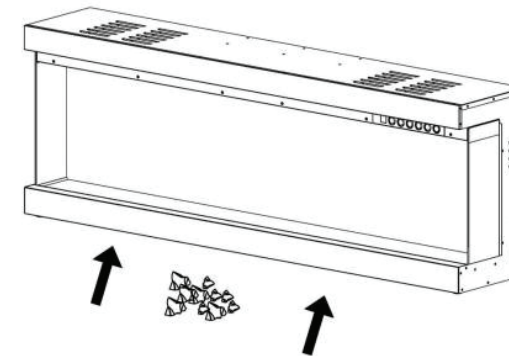

4. Platzieren Sie die dekorativen Holzscheite

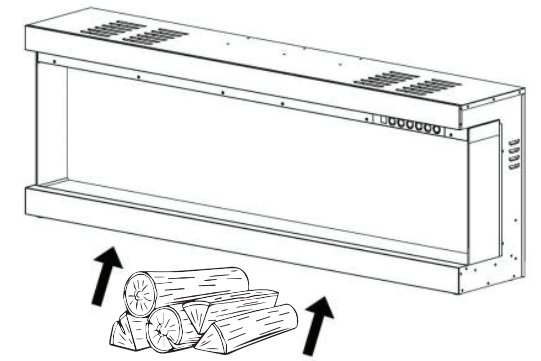

5. Nachdem Sie alle dekorativen Medien platziert haben, setzen Sie die Glasscheibe wieder ein und ziehen Sie die Schrauben fest.

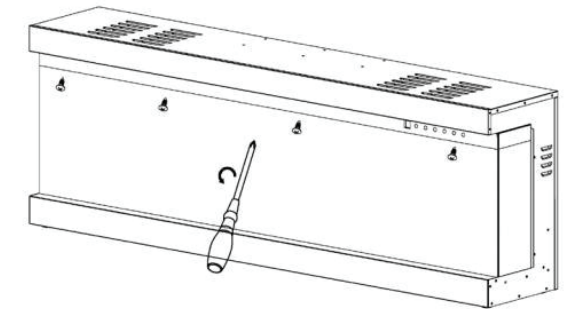

C L E A N F I R E S Y S T E M
XARALYN®

T. (+31) (0)226 - 33 14 20 | info@xaralyn.com | www.xaralyn.com

C L E A N F I R E S Y S T E M

XARALYN®

EN

App instructions

Fogo Forest 152/165



Three-sided electric fire



LIGHTS



REMOTE



HEATING

Version: 2024-01

EN App instructions

1 Fireplace Installation and unloading	2
1.1 Application requirements.....	2
1.2 Fireplace download and installation of Fireplace.....	2
2 Connection instructions	2
2.1 Mobile phone connection operation.....	2-3
3 Function instructions.....	3-5
3.1 Debugging temperature.....	3-4
3.2 Adjust the brightness of fireplace LED lights and select color.....	4
3.3 Fire gear.....	4
3.4 Time.....	4-5
3.5 Adjust the horn volume and select the horn sound	5
3.6 Firmware upgrade and modification device name.....	5
3.7 Select language and temperature unit	5
3.8 Microphone	5
3.9 Camera color	5
3.10 Music.....	5
4 Notes.....	5

Product description

The intelligent Fireplace is a close control Fireplace based on blue tooth 4.2 technology with low power consumption, which can be controlled through the Fireplace APP on the mobile phone.

App soft name: Fireplace Empire



1 Fireplace Installation and unloading

1.1 Application requirements

System version: iOS 7.0, android 4.4 or above.

Bluetooth version: blue tooth 4.2 or above low-power blue tooth mobile phone.

1.2 Fireplace download and installation

Scan the following QR code to download and install
IOS Version or Android Version




2 Instructions for connection operation


2.1 Mobile phone connection operation

1) Login: Search the app soft for "Fireplace Empire" in the Apple Store or Google Store,download and install the "Fireplace Empire" on the mobile phone, and click the icon to log in;

2) Add: on the screen of Fireplace list, click the add icon in the upper right corner of the screen to enter the device add page;

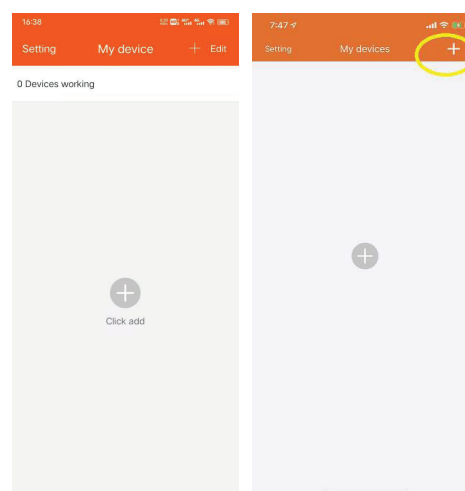

3) Search: on the Add device page, click the search icon at the bottom of the screen to find the device

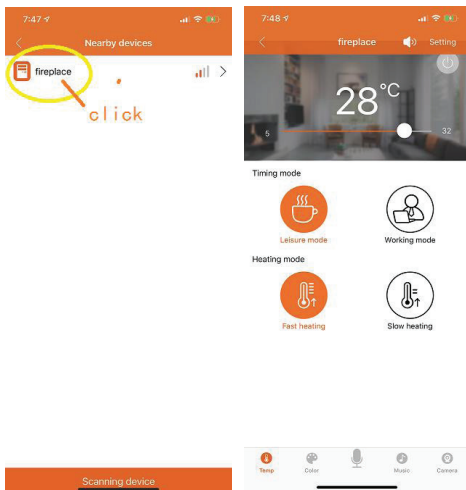


4) Connection: after the device is found, click to connect and enter the home page to display "Connected";



5) Disconnection: if the connection is beyond the blue tooth transmission range, the connection will break, and the "dis-connection" will be displayed;

6) Callback: the mobile APP that has been matched with the fireplace will automatically connect to the fireplace when it returns to the bluetooth transmission range;

7) Deletion: in the Fireplace list page, the deletion box will pop up after a long press. Select "DELETE" to DELETE the connection.

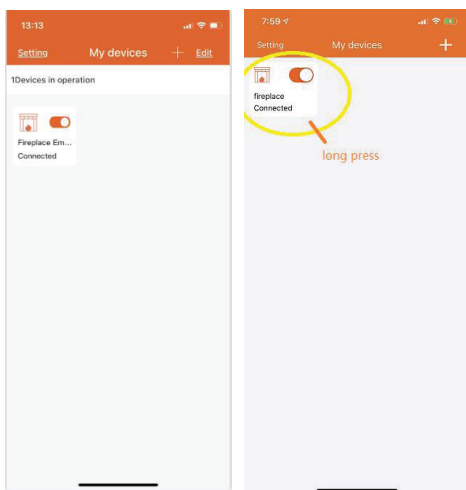


3 Function instructions

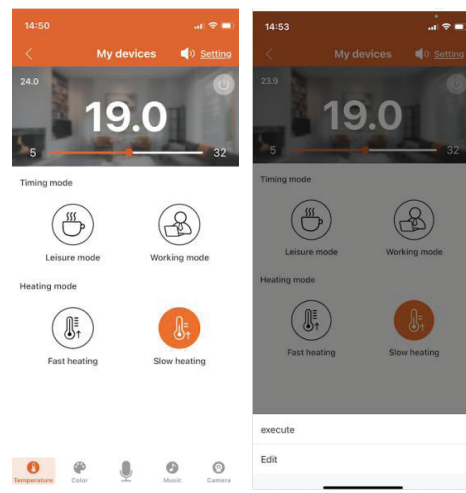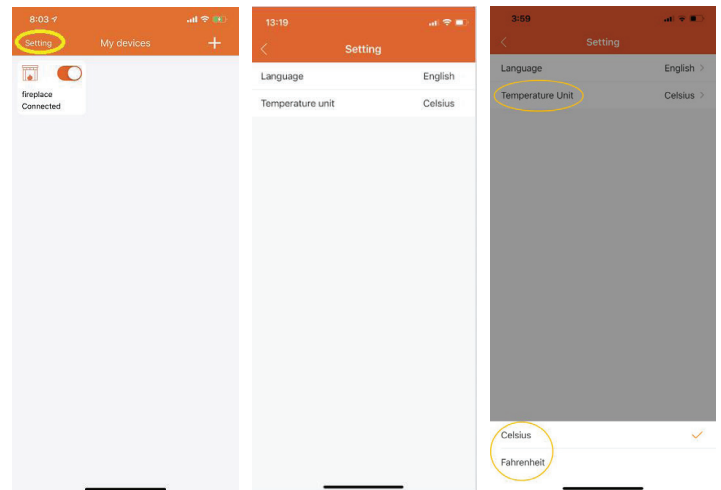

3.1 Debugging temperature


1) Turn up the temperature: click Temp in the menu at the bottom of the APP, enter the temperature control interface, and drag the cursor from 5-32 to increase the temperature setting, with the highest adjustable to 32° c; of the screen to enter the device add page;

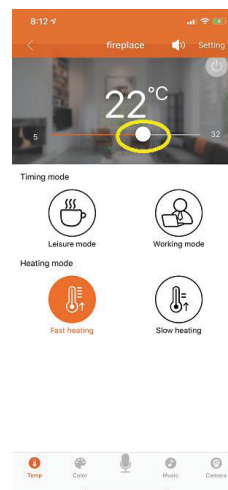

2) Lower the temperature: click Temp in the menu at the bottom of the APP, enter the temperature control interface, and drag the cursor from 5-32 to lower the temperature setting, with the lowest adjustable to 5 ° c;


Note: when the debugging temperature is higher than the indoor temperature, the meter appliance will "click" and the heating wire will start to work. When the debugging temperature is lower than the indoor temperature, the meter appliance will not ring, the heating wire does not work;

3) Picture:

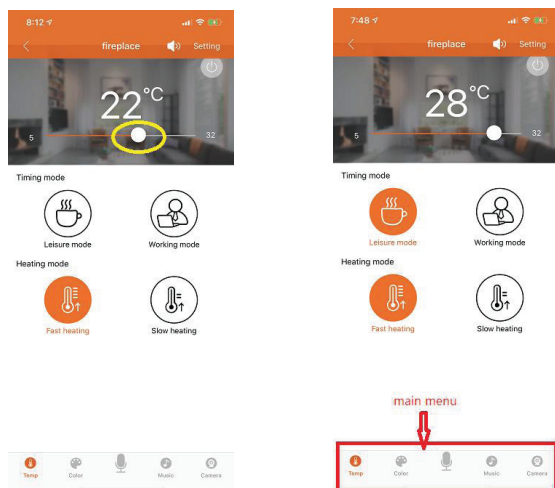


3.2 Adjust the brightness and color of LED light in the fireplace

- 1) Brightness: click "Color" in the menu below the APP, enter "LED light", and drag the cursor from 0-100, the larger the value, the brighter the brightness;
- 2) Dimming: click "Color" in the menu below the APP, enter "LED light", and drag the cursor from 0-100. The smaller the value, the darker the brightness;
- 3) Picture:
- 4) Color selection: in the color table of the circle, click a color or drag the cursor in the color table of the circle to select the color
- 5) Save color: after selecting a color, select one of the following five DIY items and hold it for a long time until it turns into the color of your choice
- 6) 7 Colorful gradient function: click the scene in the upper right corner and select the color switching mode from the list As shown in the following figure

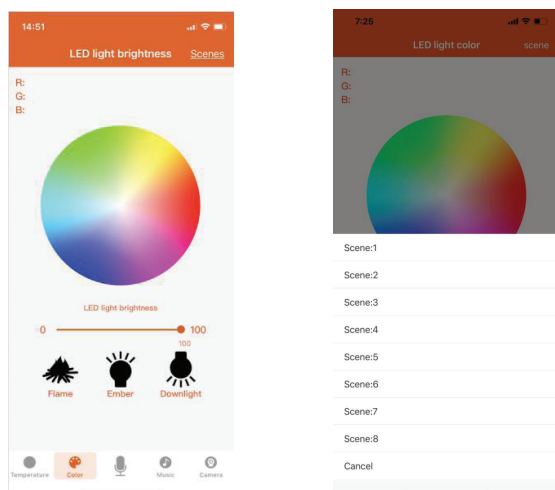


3.3 Fire gear

- 1) HEAT LOW: click Temp in the menu at the bottom of the APP, enter the temperature page, click "Slow mode" to switch to LOW level, and a flame icon will be displayed on the screen to HEAT by small fire ;
- 2) HEAT HIGH: click Temp in the menu at the bottom of the APP, enter the temperature page, click "Fast mode" to switch to HIGH level, and two flame icons will be displayed on the screen to HEAT by heavy fire ;
- 3) Picture:

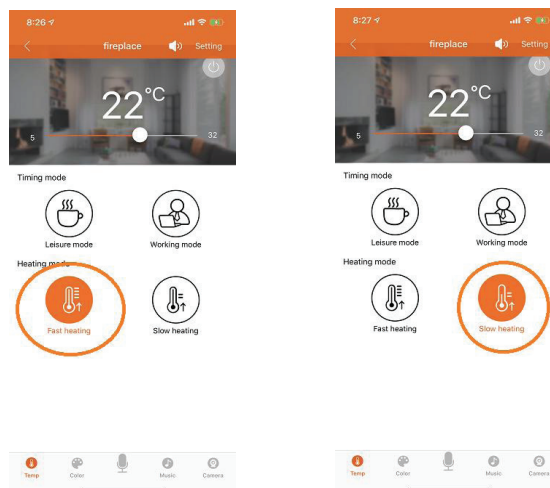

3.4 Timing

- 1) Work mode:
 - A) Click Work mode, then click "Edit" to enter the time setting;
 - B) Click "+" in the upper right corner to add timing group, and set the opening time, closing time, temperature, gear and repeat week. After setting, click "OK" to return to the timing group list interface;
 - C) Check the added timing group in the list;
 - D) Click "<" in the upper left corner to return to the temperature control interface, click Work, and select the Execution mode in the pop-up box
- Remarks:
 - A) A total of five groups of timing groups can be added. If the temperature of the set timing group is lower than the indoor temperature, the heater and heating fan will not be turned on;
 - B) Do not choose to repeat the week, the time is one-time valid;
 - C) Picture:

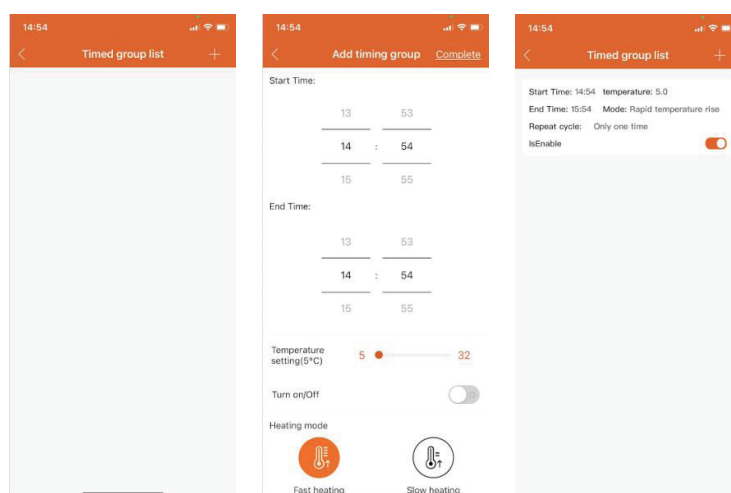

D) During the execution of the Work mode, the setting of manual debugging will be given priority to when the temperature is manually adjusted, and the Work mode will be canceled automatically. If you want to continue to execute the Work mode set in advance, please remember to re-execute the Work mode

2) HOLIDAY:

- A) Click Holiday mode, then click "Edit" to enter the time setting;
- B) Click "+" in the upper right corner to add timing group and set the opening time, closing time, temperature and gear. After setting, click "OK" and return to the timing group list interface;
- C) Check the added timing group in the list;
- D) Click "<" in the upper left corner to return to the temperature control interface, click Holiday mode, and select Execution to execute Holiday mode in the pop-up box


Remarks:

A) A total of five groups of timing groups can be added. If the temperature of the set timing group is lower than the indoor temperature, the heater and heating fan will not be turned on;

B) The timing group is valid every day;


C) Picture:

E) During the execution of the Holiday mode, the setting of manual debugging will be given priority to when the temperature is manually adjusted, and the Holiday mode will be automatically canceled. If you want to continue the execution according to the pre-set Holiday mode, please remember to re-execute the Holiday mode

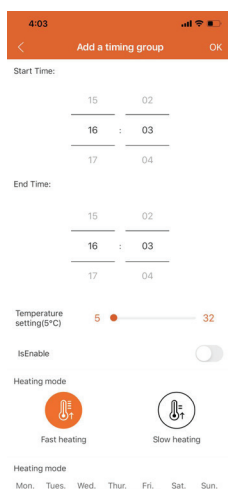

3.5 Adjust the horn volume and select the horn sound

- 1) Click Temp in the menu below to enter the temperature control interface, click the small speaker in the upper right corner to enter the Sound selected interface, and select Sound from sound1-sound8 in Sound selected
- 2) In Temperature Setting, drag the cursor to adjust the volume from 0-20
- 3) Picture:

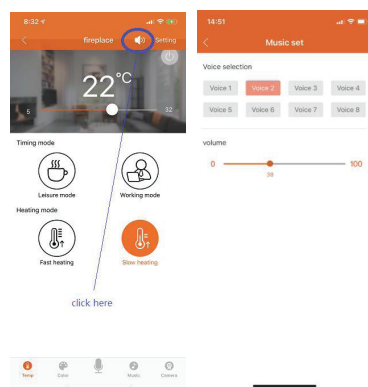

3.6 Firmware upgrade and modification of device name

- 1) Click Temp in the menu below, click Setting in the upper right corner, enter the Firmware upgrade and device name modification page, click "Firmware upgrade", and select OK, then Firmware upgrade can be carried out. After the upgrade, the device will be disconnected;
- 2) Click Modify name, Modify device name, and click OK after modification;

3.7 Select language and temperature units

- 1) Click Setting in the top left corner of the homepage, enter Setting, and click Language to select Language
- 2) Click Units of temperature to select the temperature unit

3.8 The microphone

- 1) Click the microphone in the menu below, enter the Mike page, talk into the phone, or play music near the phone, and the LED light in the fireplace will change in response

3.9 Camera color acquisition

- 1) Click the Camera in the menu below to enter the Camera color retrieval page
- 2) Point the camera at the desired color, select reference objects, such as stools, curtains, etc., and press the color until the LED light in the fireplace turns into the selected color
- 3) Picture:



3.10 Music

- 1) Click Music in the menu below to enter the Music playing page. You can select the play mode, the previous and the next song, play, pause, and select the song
- 2) Song addition:
 - A) The way to add songs on android phone :directly click the list in the lower right corner and then select the song
 - B) Apple adds songs by:
 - 1. Confirm that Itunes is installed on the computer and apple has installed its own music software on the iphone
 - 2. Connect your phone to your computer and open the Itunes program on your computer
 - 3. Use Itunes to drag or sync songs to your phone
 - 4. After adding the songs to the music software of the apple system, you can directly add the good music in the bottom right corner of the Fireplace APP
- 5. Picture:

4 Attentions

In order to ensure the good condition of the product and use safety, please follow the instructions and reminders on this manual. Careful operation, please read safety precautions in detail:

- 1. The load connected to the fireplace power panel shall not exceed the rated power.
- 2. When the power is out at home, there will be an inaccurate situation on "Timing", so it is necessary to reconnect the mobile phone to calibrate the time.
- 3. When installing the antenna of the bluetooth smart fireplace, the antenna cannot be too close to the main control panel because the antenna will be affected by the main control panel, so the antenna can be attached to the shell of the fireplace.

As shown in the figure below:



C L E A N F I R E S Y S T E M
XARALYN®

T. (+31) (0)226 - 33 14 20 | info@xaralyn.com | www.xaralyn.com